

**64000**

**HP64000  
Logic Development  
System**

**Model 64515C  
PROM Programmer  
Module**



**HEWLETT  
PACKARD**

## **CERTIFICATION**

*Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.*

## **WARRANTY**

This Hewlett-Packard system product is warranted against defects in materials and workmanship for a period of 90 days from date of installation. During the warranty period, HP will, at its options, either repair or replace products which prove to be defective.

Warranty service of this product will be performed at Buyer's facility at no charge within HP service travel areas. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses. In all other cases, products must be returned to a service facility designated by HP.

For products returned to HP for warranty service. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

## **LIMITATION OF WARRANTY**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## **EXCLUSIVE REMEDIES**

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

## **ASSISTANCE**

*Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.*

*For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.*

FOLD HERE



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES


**BUSINESS REPLY CARD**

FIRST CLASS PERMIT NO. 1303 COLORADO SPRINGS, COLORADO

POSTAGE WILL BE PAID BY ADDRESSEE

**HEWLETT-PACKARD**

Logic Product Support Dept.  
Attn: Technical Publications Manager  
Centennial Annex - D2  
P.O. Box 617  
Colorado Springs, Colorado 80901-0617

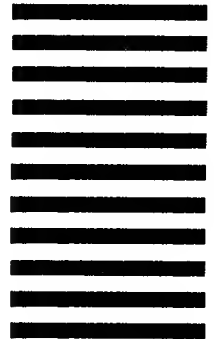

FOLD HERE

Your cooperation in completing and returning this form  
will be greatly appreciated. Thank you.

# READER COMMENT SHEET

Service Manual, Model 64515C  
PROM Programmer Module  
64515-90903, November 1983

Your comments are important to us. Please answer this questionnaire and return it to us. Circle the number that best describes your answer in questions 1 through 7. Thank you.

1. The information in this book is complete:

Doesn't cover enough  
(what more do you need?)

1 2 3 4 5

Covers everything

2. The information in this book is accurate:

Too many errors

1 2 3 4 5

Exactly right

3. The information in this book is easy to find:

I can't find things I need

1 2 3 4 5

I can find info quickly

4. The Index and Table of Contents are useful:

Helpful

1 2 3 4 5

Missing or inadequate

5. What about the "how-to" procedures and examples:

No help

1 2 3 4 5

Very helpful

Too many now

1 2 3 4 5

I'd like more

6. What about the writing style:

Confusing

1 2 3 4 5

Clear

7. What about organization of the book:

Poor order

1 2 3 4 5

Good order

8. What about the size of the book:

too big/small

1 2 3 4 5

Right size

Comments: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Particular pages with errors?

Name (optional): \_\_\_\_\_

Job title: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

**Note:** If mailed outside U.S.A., place card in envelope. Use address shown on other side of this card.

FOLD HERE



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE  
UNITED STATES


**BUSINESS REPLY CARD**

FIRST CLASS PERMIT NO. 1303 COLORADO SPRINGS, COLORADO

POSTAGE WILL BE PAID BY ADDRESSEE

**HEWLETT-PACKARD**

Logic Product Support Dept.  
Attn: Technical Publications Manager  
Centennial Annex - D2  
P.O. Box 617  
Colorado Springs, Colorado 80901-0617

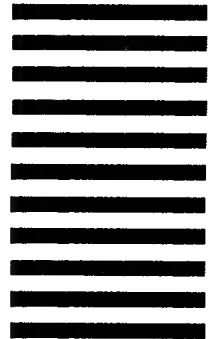

FOLD HERE

Your cooperation in completing and returning this form  
will be greatly appreciated. Thank you.

# READER COMMENT SHEET

Service Manual, Model 64515C  
PROM Programmer Module  
64515-90903, November 1983

Your comments are important to us. Please answer this questionnaire and return it to us. Circle the number that best describes your answer in questions 1 through 7. Thank you.

1. The information in this book is complete:

Doesn't cover enough  
(what more do you need?)

1 2 3 4 5

Covers everything

2. The information in this book is accurate:

Too many errors

1 2 3 4 5

Exactly right

3. The information in this book is easy to find:

I can't find things I need

1 2 3 4 5

I can find info quickly

4. The Index and Table of Contents are useful:

Helpful

1 2 3 4 5

Missing or inadequate

5. What about the "how-to" procedures and examples:

No help

1 2 3 4 5

Very helpful

Too many now

1 2 3 4 5

I'd like more

6. What about the writing style:

Confusing

1 2 3 4 5

Clear

7. What about organization of the book:

Poor order

1 2 3 4 5

Good order

8. What about the size of the book:

too big/small

1 2 3 4 5

Right size

Comments: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Particular pages with errors?  
\_\_\_\_\_

Name (optional): \_\_\_\_\_

Job title: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

**Note:** If mailed outside U.S.A., place card in envelope. Use address shown on other side of this card.

SERVICE MANUAL  
MODEL 64515C  
PROM PROGRAMMER MODULE

© COPYRIGHT HEWLETT-PACKARD COMPANY 1981, 1982, 1983  
LOGIC SYSTEMS DIVISION  
COLORADO SPRINGS, COLORADO, U.S.A.

ALL RIGHTS RESERVED

Manual Part Number: 64515-90903

Printed: November 1983

## SAFETY SUMMARY

*The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.*

### GROUND THE INSTRUMENT.

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

### DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

### KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

### DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

### DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification of the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

### DANGEROUS PROCEDURE WARNINGS.

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

#### WARNING

**Dangerous voltages, capable of causing death, are present in this instrument.  
Use extreme caution when handling, testing, and adjusting.**



## Table of Contents

Section	Title	Page
I	General Information.....	1-1
	1-1. Introduction.....	1-1
	1-3. Safety Considerations.....	1-1
	1-5. Instruments Covered by this Manual.....	1-1
	1-10. Application.....	1-2
II	Installation and Removal.....	2-1
III	Operation.....	3-1
IV	Performance Verification.....	4-1
	4-1. Introduction.....	4-1
	4-2. Procedure.....	4-1
V	Adjustments.....	5-1
VI	Replaceable Parts.....	6-1
	6-1. Introduction.....	6-1
	6-3. Abbreviations.....	6-1
	6-5. Replaceable Parts List.....	6-1
	6-7. Ordering Information.....	6-2
	6-10. Direct Mail Order System.....	6-2
VII	Manual Changes.....	7-1
VIII	Theory and Schematics.....	8-1
	8-1. Introduction.....	8-1
	8-4. Theory.....	8-1

### List of Illustrations

Figure	Title	Page
1-1.	Model 64515C PROM Programmer Module.....	1-1
4-1.	Model 64515C Illustrated Parts Breakdown.....	4-3
8-1.	Timing Diagram for the 2564.....	8-6
8-2.	Timing Diagram for the 27256.....	8-7
8-3.	Timing Diagram for the 2764/27128 and 2764A/27128A.....	8-8
8-4.	Model 64515C Illustrated Parts Breakdown.....	8-9
8-5.	Component Locator.....	8-10
8-6.	Schematic.....	8-11

### List of Tables

Table	Title	Page
1-1.	Applicable PROM Devices.....	1-2
6-1.	Abbreviations and Reference Designators.....	6-3
6-2.	Replaceable Parts .....	6-4
6-3.	Manufacturers' Codes.....	6-5
8-1.	MODE selection.....	8-2
8-2.	Program/Verify Sequence for the 2564.....	8-3
8-3.	Program/Verify Sequence for the 2764/27128 and 2764A/27128A.....	8-4
8-4.	Program/Verify Sequence for the 27256.....	8-5

## SECTION I

### GENERAL INFORMATION

#### 1-1. INTRODUCTION.

1-2. This manual contains technical information concerning the application, troubleshooting, replacing failed parts, and the theory-of-operation for the Model 64515C PROM Programmer Module as used in the 64000 Logic Development System. The module is shown in figure 1-1.



Figure 1-1. Model 64515C PROM Programmer Module

#### 1-3. SAFETY CONSIDERATIONS.

1-4. There are no electrical shock hazards associated with the Model 64515C since there are no high voltages present. There are, however, high voltages associated with the 64100A Mainframe and appropriate warnings are given in the Mainframe Tab where these hazards exist.

#### 1-5. INSTRUMENTS COVERED BY THIS MANUAL.

1-6. This manual covers the model 64515C PROM Programmer Module with the 64515-66504 or 64515-66505 PC board installed. A module manufactured after the print date of this manual may contain a PC board with a later revision letter.

## Model 64515C - General Information

1-7. The manual for a modified module will be accompanied by a "Manual Change" supplement. This supplement will be delivered with each modified module and will contain change information that explains how to adapt this manual to the newer modified module.

1-8. In addition to change information, the supplement will contain information for correcting errors in this manual. To keep this manual as current as possible, Hewlett-Packard recommends that you periodically request the latest manual changes supplement. The supplement for this manual is identified with the model number and manual print date both of which appear on the title page. Complimentary copies of the supplement are available from Hewlett-Packard Sales/Service Office.

1-9. For information concerning the applicability of this manual or the Manual Changes supplement, contact your nearest Hewlett-Packard Sales/Service Office.

### 1-10. APPLICATION.

1-11. The Model 64515C will program and/or readout the integral EPROMs listed in table 1.

Table 1-1. Applicable EPROM Devices

EPROM	Mfg.	Description
2564	TI	The TMS 2564 is a 65,536 bit, ultra-violet light erasable, electronically programable read only memory.
2764/2764A	Intel	The Intel 2764/2764A is a 65,536 bit ultraviolet light erasable and electronically programable read-only memory.
27128/27128A	Intel	The Intel 27128/27128A is a 5v only, 131,072 bit ultraviolet erasable and electronically programmable read-only memory.
27256	Intel	The Intel 27256 is a 262,144 bit ultra-violet erasable and electronically programmable read-only memory.

## SECTION II

### INSTALLATION AND REMOVAL

2-1. A 50-pin ribbon cable (HP P/N 8120-3346) connects the 64501A Programmer Controller PCB to the 64515C Programmer Module. The cable end with the single connector is connected to the Controller PCB and the end with the double connector is connected to the Programmer Module.

2-2. The cable should be routed across the top of the cardcage and down behind the front panel such that the two connectors are visible in the opening for the programmer module. Connect the cable to the PCB in the Programmer Module using the connector on the extreme end of the cable.

#### NOTE

The PCB and cable connectors are keyed and fit only one way.

```
***** CAUTION *****
*
*
* To prevent possible damage to the PROM Programmer *
* circuits, turn Mainframe power OFF before install- *
* ing or removing the Programmer Module.             *
*
*****
```



### SECTION III

#### OPERATION

The operation of the 64515C is a function of the system software. Complete operation from the keyboard of the system is beyond the scope of the Service Manual. Please refer to the Operator's Manual for the procedure.

```
***** CAUTION *****
*
* The proper operation of the positive PROM
* programmer requires that a PROM be inserted
* ONLY AFTER the PROM programmer software
* module is called and that the PROM be RE-
* MOVED before the PROM programmer software
* module is exited. Damage to the PROM may
* result if this procedure is not followed!
*
*****
```

#### NOTE

The PROM programmer software module is called by pressing the "prom\_prog" softkey then the Return key. To exit the PROM programmer software module, press the "end" softkey, then the Return key.





## SECTION IV

### PERFORMANCE VERIFICATION

#### 4-1. INTRODUCTION.

4-2. This section normally contains the information for running the Performance Verification. However, due to the relative low cost of the PROM Programmer PC board, in this module, it is most likely more economical to discard it if it fails than to have the Hewlett-Packard Sales/Service repair it. The basic troubleshooting approach is to first determine if the Prom Controller PC board is at fault, or if the problem is in the module. This is done by using the 64502A PROM Programmer Module in conjunction with the 64501A controller board and running the PROM Performance Verification Tests.

#### 4-3. PROCEDURE.

4-4. If a PROM programming problem is apparent (i.e., you can't successfully program and verify a particular PROM chip), perform the following troubleshooting procedure:

- a. Turn OFF the mainframe power.
- b. Install a 64502A PROM Programmer Module in place of the currently installed 64515C model.

```
***** CAUTION *****
*
*
* The Model 64502A PROM Module is the ONLY
* module that is compatible with the PROM
* PV tests. All other models are subject to
* damage due to component overstressing if
* the PV test is attempted with any other
* module installed.
*
*****
```

- c. Turn ON the mainframe power.
- d. Refer to Section IV of the 64500S Positive PROM Programmer Tab and run the PV tests described in that Section.
- e. If there are no error messages while running the PV test, it is reasonable to assume that this PROM Programmer Module has failed. In this case, refer to the Illustrated Parts Breakdown (figure 4-1) and replace the PC board assembly (HP P/N 64515-66504 or 64515-66505).

## Model 64515C - Performance Verification

### NOTE

Section VIII describes the functions performed by the 64515C PC board.

- d. Verify that the problem has been fixed by attempting to program and verify from a PROM chip like the type that was originally causing problems.

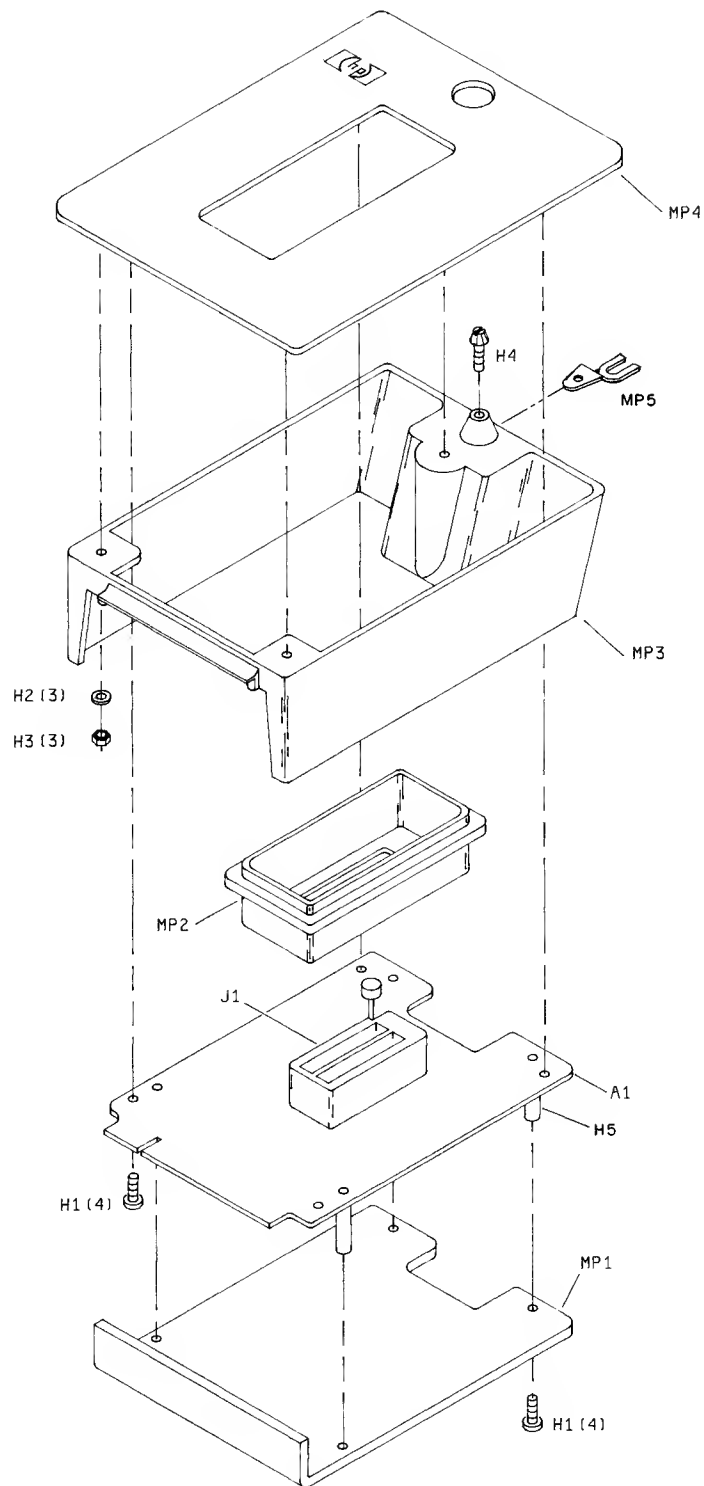


Figure 4-1. Model 64515C Illustrated Parts Breakdown



SECTION V  
ADJUSTMENTS

5-1. The 64515C PROM Programmer Module has no adjustments.



## SECTION VI

### REPLACEABLE PARTS

#### 6-1. INTRODUCTION.

6-2. This section contains information for ordering parts. Table 6-1 lists abbreviations used in the parts list and throughout the manual. Table 6-2 lists all replaceable parts in reference designator order. Table 6-3 contains the names and addresses that correspond to the manufacturers' five-digit code numbers.

#### 6-3. ABBREVIATIONS.

6-4. Table 6-1 lists abbreviations used in the parts list, the schematics and throughout the manual. In some cases, two forms of the abbreviation are used: one all in capital letters, and one partial or no capitals. This occurs because the abbreviations in the parts list are always capitals. However, in the schematics and other parts of the manual, other abbreviation forms are used with both lowercase and uppercase letters.

#### 6-5. REPLACEABLE PARTS LIST.

6-6. Table 6-2 is the list of replaceable parts and is organized as follows:

- a. Chassis-mounted parts in alphanumerical order by reference designation.
- b. Electrical assemblies and their components in alphanumerical order by reference designation.
- c. Miscellaneous parts.

The information given for each part consists of the following:

- a. The Hewlett-Packard part number and the check digit.
- b. The total quantity (Qty) in the instrument.
- c. The description of the part.
- d. A five-digit code that indicates the manufacturer.
- e. The manufacturer's part number.

The total quantity for each part is given only once - at the first appearance of the part number in the list.

## Model 64515C - Replaceable Parts

### 6-7. ORDERING INFORMATION.

6-8. To order a part listed in the replaceable parts table, quote the Hewlett-Packard part number and check digit, indicate the quantity required, and address the order to the nearest Hewlett-Packard Sales/Service office.

6-9. To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument repair number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard Sales/Service office.

### 6-10. DIRECT MAIL ORDER SYSTEM.

6-11. Within the U.S.A., Hewlett-Packard can supply parts through a direct mail order system. Advantages of using the system are as follows:

- a. Direct ordering and shipment from the HP Parts Center in Mountain View, California.
- b. No maximum or minimum on any mail order (there is a minimum order amount, for parts ordered through a local HP office when the orders require billing and invoicing).
- c. Prepaid transportation (there is a small handling charge for each order).
- d. No invoices - to provide these advantages, a check or money order must accompany each order.

6-12. Mail-order forms and specific ordering information are available through your local HP office. Addresses and phone numbers are located at the back of this manual.



Table 6-1. Reference Designators and Abbreviations

REFERENCE DESIGNATORS							
<b>A</b>	= assembly	<b>F</b>	= fuse	<b>MP</b>	= mechanical part	<b>U</b>	= integrated circuit
<b>B</b>	= motor	<b>FL</b>	= filter	<b>P</b>	= plug	<b>V</b>	= vacuum, tube, neon bulb, photocell, etc
<b>BT</b>	= battery	<b>IC</b>	= integrated circuit	<b>Q</b>	= transistor	<b>VR</b>	= voltage regulator
<b>C</b>	= capacitor	<b>J</b>	= jack	<b>R</b>	= resistor	<b>W</b>	= cable
<b>CP</b>	= coupler	<b>K</b>	= relay	<b>RT</b>	= thermistor	<b>X</b>	= socket
<b>CR</b>	= diode	<b>L</b>	= inductor	<b>S</b>	= switch	<b>Y</b>	= crystal
<b>DL</b>	= delay line	<b>LS</b>	= loud speaker	<b>T</b>	= transformer	<b>Z</b>	= tuned cavity network
<b>DS</b>	= device signaling (lamp)	<b>M</b>	= meter	<b>TB</b>	= terminal board		
<b>E</b>	= misc electronic part	<b>MK</b>	= microphone	<b>TP</b>	= test point		
ABBREVIATIONS							
<b>A</b>	= amperes	<b>H</b>	= henries	<b>N/O</b>	= normally open	<b>RMO</b>	= rack mount only
<b>AFC</b>	= automatic frequency control	<b>HDW</b>	= hardware	<b>NOM</b>	= nominal	<b>RMS</b>	= root-mean square
<b>AMPL</b>	= amplifier	<b>HEX</b>	= hexagonal	<b>NPO</b>	= negative positive zero (zero temperature coefficient)	<b>RWV</b>	= reverse working voltage
<b>BFO</b>	= beat frequency oscillator	<b>HG</b>	= mercury	<b>NPN</b>	= negative-positive-negative	<b>S-B</b>	= slow-blow
<b>BE CU</b>	= beryllium copper	<b>HR</b>	= hour(s)	<b>NRFR</b>	= not recommended for field replacement	<b>SCR</b>	= screw
<b>BH</b>	= binder head	<b>HZ</b>	= hertz	<b>NSR</b>	= not separately replaceable	<b>SE</b>	= selenium
<b>BP</b>	= bandpass					<b>SECT</b>	= section(s)
<b>BRS</b>	= brass	<b>IF</b>	= intermediate freq			<b>SEMICON</b>	= semiconductor
<b>BWO</b>	= backward wave oscillator	<b>IMPG</b>	= impregnated			<b>SI</b>	= silicon
<b>CCW</b>	= counter-clockwise	<b>INCD</b>	= incandescent			<b>SIL</b>	= silver
<b>CER</b>	= ceramic	<b>INCL</b>	= include(s)	<b>OBD</b>	= order by description	<b>SL</b>	= slide
<b>CMO</b>	= cabinet mount only	<b>INS</b>	= insulation(ed)	<b>OH</b>	= oval head	<b>SPG</b>	= spring
<b>COEF</b>	= coefficient	<b>INT</b>	= internal	<b>OX</b>	= oxide	<b>SPL</b>	= special
<b>COM</b>	= common	<b>K</b>	= kilo=1000			<b>SST</b>	= stainless steel
<b>COMP</b>	= composition					<b>SR</b>	= split ring
<b>COMPL</b>	= complete	<b>LH</b>	= left hand	<b>P</b>	= peak	<b>STL</b>	= steel
<b>CONN</b>	= connector	<b>LIN</b>	= linear taper	<b>PC</b>	= printed circuit		
<b>CP</b>	= cadmium plate	<b>LK WASH</b>	= lock washer	<b>PF</b>	= picofarads= 10 <sup>-12</sup> farads	<b>TA</b>	= tantalum
<b>CRT</b>	= cathode-ray tube	<b>LOG</b>	= logarithmic taper	<b>PH BRZ</b>	= phosphor bronze	<b>TD</b>	= time delay
<b>CW</b>	= clockwise	<b>LPF</b>	= low pass filter	<b>PHL</b>	= phillips	<b>TGL</b>	= toggle
				<b>PIV</b>	= peak inverse voltage	<b>THD</b>	= thread
<b>DEPC</b>	= deposited carbon	<b>M</b>	= milli=10 <sup>-3</sup>	<b>PNP</b>	= positive-negative-positive	<b>TI</b>	= titanium
<b>DR</b>	= drive	<b>MEG</b>	= meg=10 <sup>6</sup>			<b>TOL</b>	= tolerance
<b>ELECT</b>	= electrolytic	<b>MET FLM</b>	= metal film	<b>P/O</b>	= part of	<b>TRIM</b>	= trimmer
<b>ENCAP</b>	= encapsulated	<b>MET OX</b>	= metallic oxide	<b>POLY</b>	= polystyrene	<b>TWT</b>	= traveling wave tube
<b>EXT</b>	= external	<b>MFR</b>	= manufacturer	<b>PORC</b>	= porcelain		
		<b>MHZ</b>	= mega hertz	<b>POS</b>	= position(s)	<b>U</b>	= micro=10 <sup>-6</sup>
<b>F</b>	= farads	<b>MINAT</b>	= miniature	<b>POT</b>	= potentiometer	<b>VAR</b>	= variable
<b>FH</b>	= flat head	<b>MOM</b>	= momentary	<b>PP</b>	= peak-to-peak	<b>VDCW</b>	= dc working volts
<b>FIL H</b>	= fillister head	<b>MOS</b>	= metal oxide substrate	<b>PT</b>	= point		
<b>FXD</b>	= fixed	<b>MTG</b>	= mounting	<b>PWV</b>	= peak working voltage	<b>W/</b>	= with
		<b>MY</b>	= "mylar"			<b>W</b>	= watts
<b>G</b>	= giga (10 <sup>9</sup> )	<b>N</b>	= nano (10 <sup>-9</sup> )	<b>RECT</b>	= rectifier	<b>WIV</b>	= working inverse voltage
<b>GE</b>	= germanium	<b>N/C</b>	= normally closed	<b>RF</b>	= radio frequency	<b>WW</b>	= wirewound
<b>GL</b>	= glass	<b>NE</b>	= neon	<b>RH</b>	= round head or right hand	<b>W/O</b>	= without
<b>GRD</b>	= grounded	<b>NI PL</b>	= nickel plate				

# Model 64515C - Replaceable Parts

Table 6-2. Replaceable Parts

Ref. HP Part Des. Number	C Qty D	Description	Mfr. Code	Mfr. Part Number
A1 64515-66505	0 1	PC BOARD ASSEMBLY	28480	64515-66505
C1 0180-0374	5 1	CF TA 10UF 20V	28480	0180-0374
C2,4 0160-5321	5 2	CF CE .01UF 100V	28480	0160-5321
C3 0160-5315	0 1	CF CE 3300PF 100V	28480	0160-5315
H1 2360-0113	2 8	MS 6-32 .250LG	28480	2360-0113
H2 3050-0425	3 3	WFL .125 .312 .04	28480	3050-0425
H3 2260-0009	3 3	NUTH 4-40 .093	28480	2260-0009
H4 0570-0661	8 1	SCREW-THUMB	28480	0570-0661
H5 0380-0162	1 4	SPRC 6-32 .750	28480	0380-0162
J1 1200-0870	9 1	ZIF SCKT 28 PIN	28480	1200-0870
MP1 64500-04101	5 1	COVER-SAFETY	28480	64500-04101
MP2 64500-45205	6 1	BATHTUB 28	28480	64500-45205
MP3 5041-1576	0 1	PANEL-SUPPORT	28480	5041-1576
MP4 64515-00204	8 1	PANEL INTEL 27256	28480	64515-00204
MP5 64500-09101	5 1	GROUND CLIP	28480	00180-09104
R1 0757-0401	0 1	RF .12MF 100	28480	0757-0401
R2 0757-0412	3 1	RF .12MF 365	28480	0757-0412
R3 0757-0420	3 1	RF .12MF 750	28480	0757-0420
RP1 1810-0279	5 1	RES NET-4.7K x 9	01121	210A472
RP2 1810-0280	8 1	RES NET-10K x 9	01121	210A103
U1 1820-1416	5 1	IC INVERTER	18324	74LS14
U2 1820-2102	8 1	IC 8 BIT LATCH	18324	74LS373N

Table 6-3. Manufacturers' Codes

Mfr. No.	Manufacturer Name	Address	Zip Code
28480	Hewlett-Packard Corp.	Palo Alto	Ca 94304
01121	Allen-Bradley Co.	Milwaukee	Wi 53204
18324	Signetics Corp.	Sunnyvale	Ca 94086
04222	AVX Ceramics Corp.	Myrtle Beach	SC 29577
19613	Textool Products INC.	Irving	Tx 75060
24546	Corning Glass Works	Bradford	Pa 16701



## SECTION VII

### BACKDATING

7-1. There is no backdating information applicable to the 64515C PROM Programmer Module at the publication date of this manual.



## SECTION VIII

### SERVICE

#### 8-1. INTRODUCTION.

8-2. The 64515C PROM Programmer Module provides the electrical interface between the 64501A PROM Programmer Controller and the PROM chip being programmed, verified or read. The PROM programmer circuits are contained on one PC board (HP P/N 64515-66504 or 64515-66505).

8-3. Figure 8-1, 8-2 and 8-3 are timing diagrams, figure 8-5 is a detailed schematic diagram and figure 8-4 is the component locator for the 64515C PC board.

#### 8-4. THEORY.

8-5. GENERAL. The PROM Programmer circuits provide the following basic functions:

- a. Multiplexes via latch U1 the low order address bits to provide 14 address bits (A0 out - A13 out) to the EPROM chip. The Intel 2764/2764A and TMS 2564 use only 13 of the address bits.

Since the Intel 27128/27128A is a 128K EPROM, an extra address bit is provided (A13) and the Intel 27256 requires 2 extra address bits (A13 and A14) to address its 256K memory locations (8 X 32K).

- b. Uses the programming voltage signal (VP3) from the Controller PCB in conjunction with control bits A13 in, A14 in, and LP2 (2564 uses A4 in also ) to generate the control signals necessary to program the EPROM chip.
- c. Generates the "1D HEX" ID code (ID0-ID4).
- d. Routes "programming" data (DW0-DW7) from the Controller PCB to the EPROM chip.
- e. Provides current sinking thru RP2 and current sourcing thru RP1 in the quiescent state for DW0-DW7 and DR0-DR7 data lines.
- f. Routes "read" data (DR0-DR7) from EPROM chip back to the Controller PCB during verification and normal reading. It should be noted that the verification of all data programmed into the EPROM takes place after the chip has been programmed and not during the programming sequence.

8-6. ADDRESSING, WRITING and READING CIRCUITS. Thirteen bits of addressing (A0 out - A12 out) are used for selecting any one of the 8192 internal memory locations in the 2564 and 2764/2764A memories. A fourteenth bit A13 out is provided to address the 16K bytes of memory in 27128/27128A EPROM and address bits A13 and A14 out are provided to address the 32K bytes of memory in the Intel 27256 EPROM.

8-7. The low-order bits ( A0 out - A7 out ) are latched from the Controller PCB using Latch U1 on the 64515C PCB ,then the high-order bits (A8 out - A12 out) are multiplexed with low addresses A0-A4 and bypasses Latch U1 so that thirteen address lines address the EPROM on only eight address lines. The 27128/27128A chip uses A10 in from the EPROM Programmer Controller board for A13 out due to the chip size (16K x 8). The 27256 chip uses also A13 out and A14 out (32K x 8).

8-8. PROM MODULE ID. The final function provided by the 64515C PCB is the generation of the 1D HEX ID code. This is done by grounding ID0, ID2, ID3 and ID4 while tying ID1 to +5 V. Since ID0 is the LSB, this produces 00010 which becomes 11101 since the ID signals are low true. This is equivalent to decimal 29 (1D HEX).

8-9. PROGRAMMING SEQUENCE. In brief, the programming process consists of: 1) activating the program mode, 2) applying the lower 8 bits of address and latching them into U2, 3) applying the upper 5 bits of address via the lower 5 bits A0-A4 (multiplexing 13 bits on 8 lines), 4) applying data and VPP, 5) applying the programming pulse. Each 8-bit word is programmed completely into a specific location before moving on to the next and repeating steps 1 thru 5.

Table 8-1. MODE Selection

MODE	$\overline{CE}$	$\overline{OE}$	$\overline{PGM}$	VPP	VCC	OUTPUTS
Read	V low	V low	V hi	Vcc	Vcc	D out
Standby	V hi	X	X	Vcc	Vcc	High Z
** Program	V low	V hi	V low	Vpp	Vcc	D in
Program Verify	V low	V low	V hi	Vpp	Vcc	D out
Program Inhibit	V hi	X	X	Vpp	Vcc	High Z

X can be either V low or V hi

#### NOTE

There is no "Program" pin on the 27256



Table 8-2. Program/Verify Sequence for the 2564

1. Press the [prom\_prog] softkey. Select the 2564 EPROM (softkey).
2. Initial conditions:
  - a) VPP = +1.2 VDC
  - b)  $\overline{CE}$  = +5 VDC
  - c)  $\overline{CS1}/\overline{CS2}$  = 0 VDC
  - d)  $\overline{PGM}$  = 0 VDC
3. Insert EPROM chip into ZIF socket J1.
4. VPP (VP3) gets raised to +5 VDC.
5. Apply address for bit location to be programmed.
6. Latch lower 8 bits of address then pass upper bits of address.
7. Apply data to Bus (bits DW0-DW7).
8. Apply programming power. VPP goes to +21 Volts.
9.  $\overline{PGM}$  is the programming signal and is brought low for 50 mS.
10. Lower programming power (VPP goes to +5 VDC).
11. Repeat step 4 through 8 to program remaining data into PROM memory.
12. The Verify Sequence will begin and run through all the previously programmed locations of memory. A failure message will be displayed if any memory location was not programmed correctly.

NOTE

Programmer should be at conditions of step 1 when PROM chip is removed from ZIF socket J1.

Table 8-3. Program/Verify Sequence for the 2764/2764A, 27128/27128A

1. Press the [prom\_prog] softkey. Select the 2764, 2764A, 27128, or the 27128A EPROM (softkey).
2. Initial conditions:
  - a) VPP = +1.2 VDC
  - b)  $\overline{\text{CE}}$  = +5 VDC
  - c)  $\overline{\text{OE}}$  = +5 VDC
  - d)  $\overline{\text{PGM}}$  = 0 VDC
3. Insert EPROM chip into ZIF socket J1.
4. VPP gets raised to +5 VDC.
5. Apply address for bit location to be programmed.
6. Latch lower 8 bits of address then pass upper bits of address.
7. Apply data to Bus (bits DW0-DW7).
8. Apply programming power. VPP goes to +21 volt (11.5 volts for 2764A/27128A).
9.  $\overline{\text{CE}}$  goes low for duration of programming sequence
9.  $\overline{\text{PGM}}$  is the programming signal and goes low for 1 mS initially.
10.  $\overline{\text{OE}}$  goes low and a Verify Sequence takes place. If the Verify Sequence fails, the PROM is reprogrammed and a Verify Sequence takes place again. The Programm/Verify Sequence (steps 9 and 10) will occur for up to 15 failures and then drop out of the program mode. When/if the PROM passes the verify test, it then will be programmed X number of times (X = the number of times the PROM went through the program/verify sequence).
11. Lower programming power (VPP goes to +5 VDC).
12. Repeat step 4 through 11 to program remaining data into PROM memory.
13. The Read/Verify Sequence will begin and run through all the previously programmed locations of memory. A failure message will be displayed if any memory location was not programmed correctly.

Table 8-4. Program/Verify Sequence for the 27256

1. Press the [prom\_prog] softkey. Select the 27256 EPROM (softkey).
2. Initial conditions:
  - a)  $V_{PP} = +1.2 \text{ VDC}$
  - b)  $\overline{CE} = +5 \text{ VDC}$
  - c)  $\overline{OE} = +5 \text{ VDC}$
  - d)  $\overline{PGM} = 0 \text{ VDC}$
3. Insert EPROM chip into ZIF socket J1.
4.  $V_{PP}$  gets raised to +5 VDC.
5. Apply address for bit location to be programmed.
6. Latch lower 8 bits of address then pass upper bits of address.
7. Apply data to Bus (bits DW0-DW7).
8. Apply programming power.  $V_{PP}$  goes to +12 Volt.
9.  $\overline{CE}$  is the programming signal and goes low for 1 mS initially.
10.  $\overline{OE}$  goes low and a Verify Sequence takes place. If the Verify Sequence fails, the PROM is reprogrammed and a Verify Sequence takes place again. The Program/Verify Sequence (steps 9 and 10) will occur for up to 15 failures and then drop out of the program mode. When/if the PROM passes the verify test, it then will be programmed X number of times (X = the number of times the PROM went through the program/verify sequence).
11. Lower programming power ( $V_{PP}$  goes to +5 VDC).
12. Repeat step 4 through 11 to program remaining data into PROM memory.
13. The Verify Sequence will begin and run through all the previously programmed locations of memory. A failure message will be displayed if any memory location was not programmed correctly.


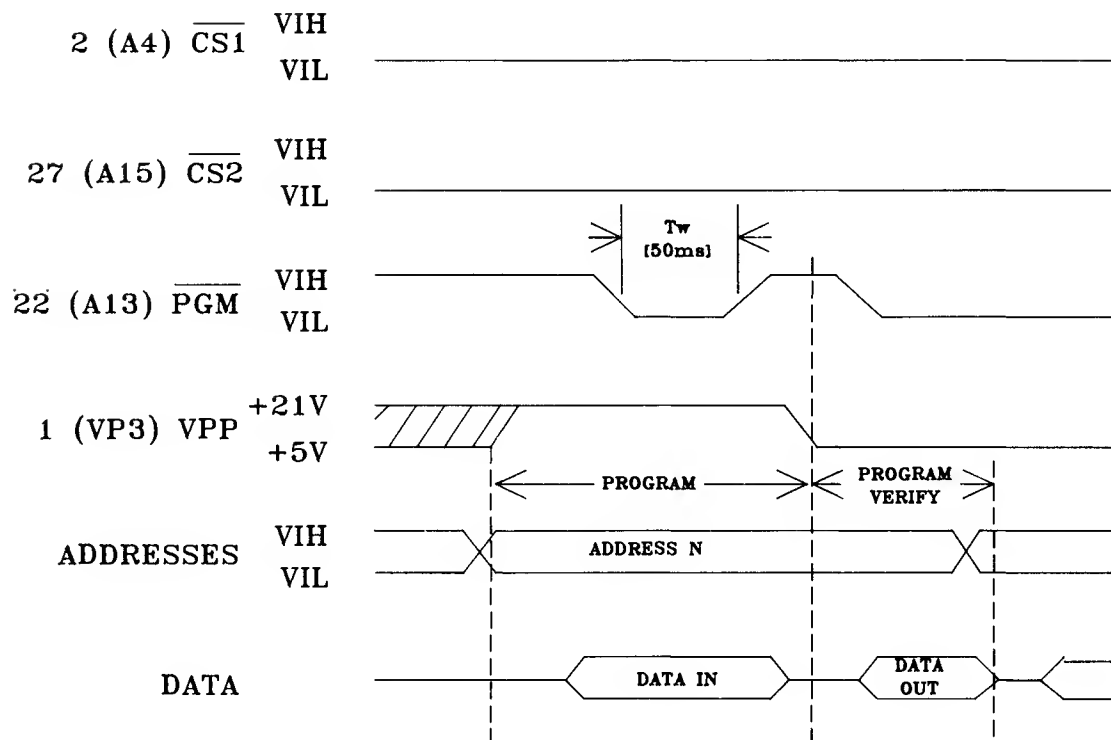


Figure 8-1. Timing Diagram for the 2564

## PROGRAM 27256

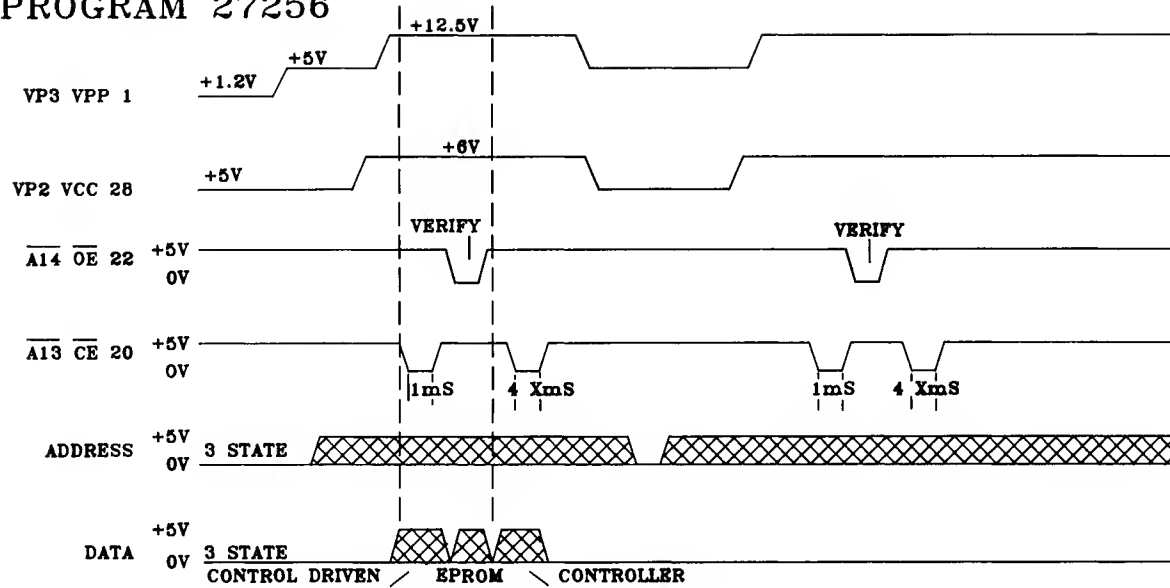

## READ 27256


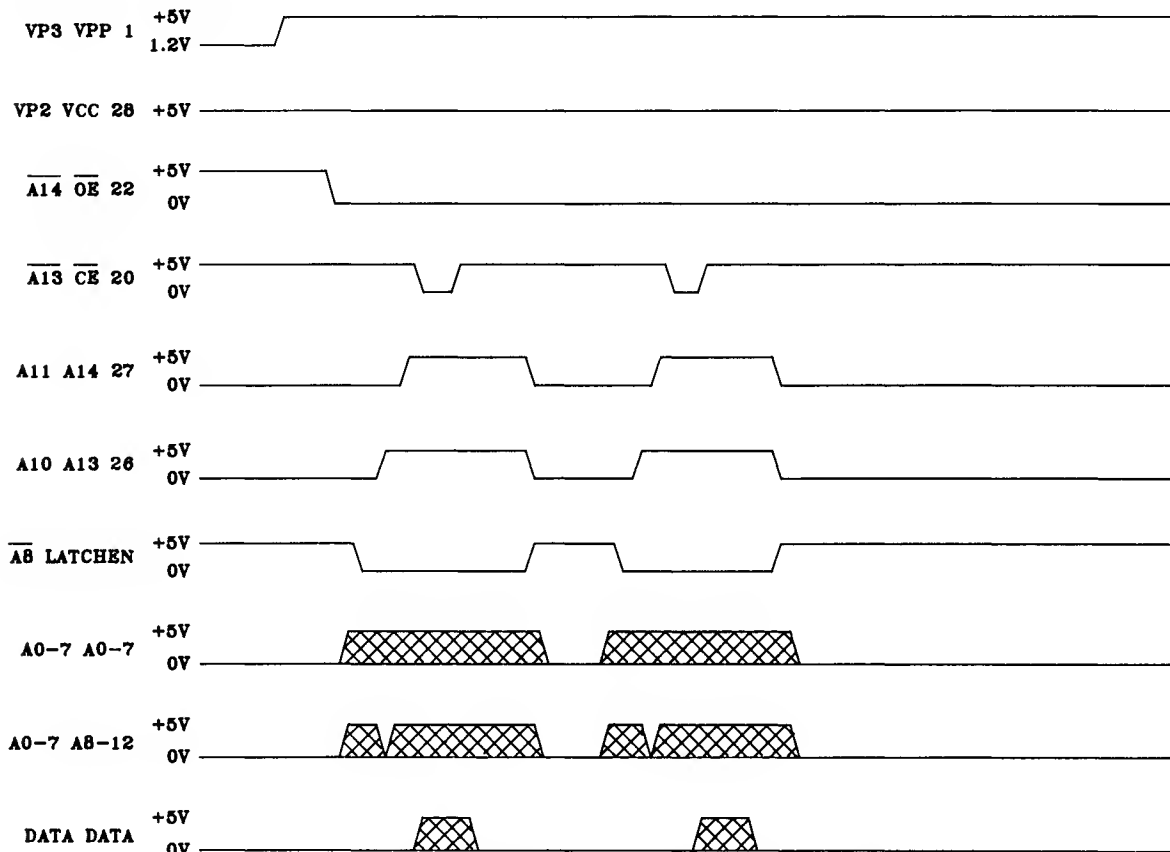


Figure 8-2. Timing Diagram for the 27256

# PROGRAM 2764/27128

# 2764A/27128A

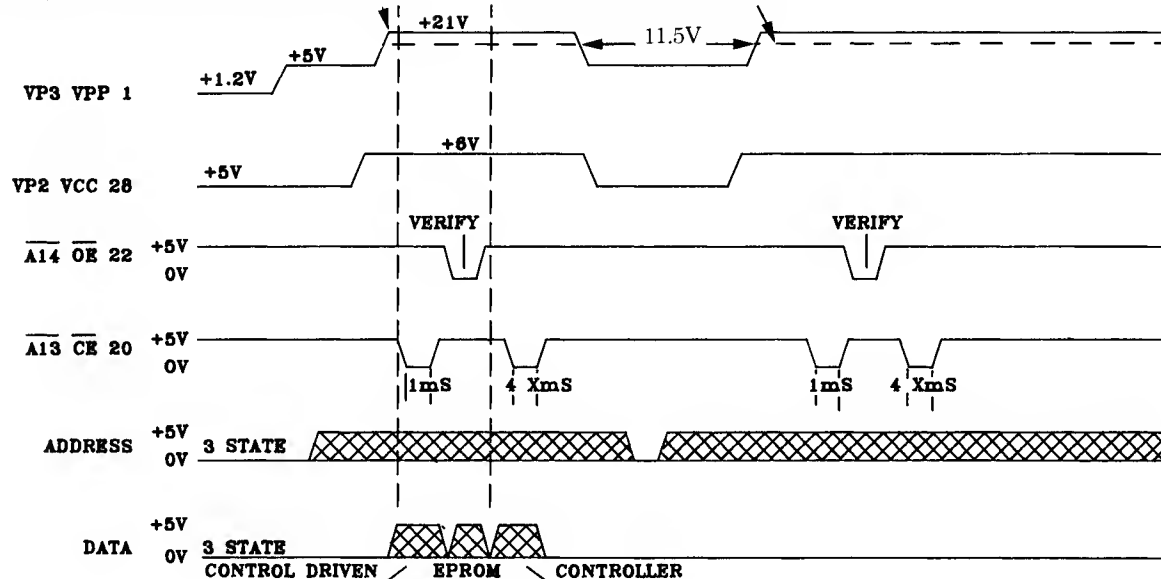

## READ 2764/27128

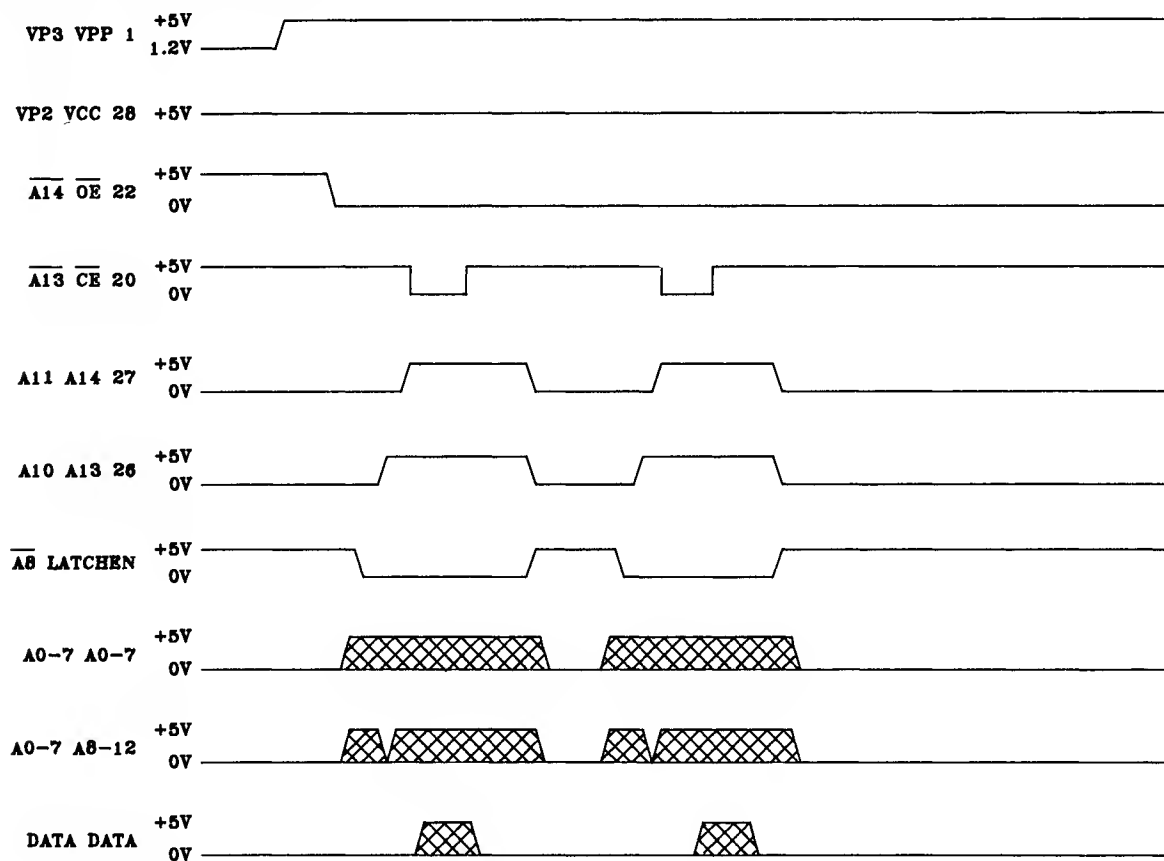


Figure 8-3. Timing Diagram for the 2764/2764A and 27128/27128A

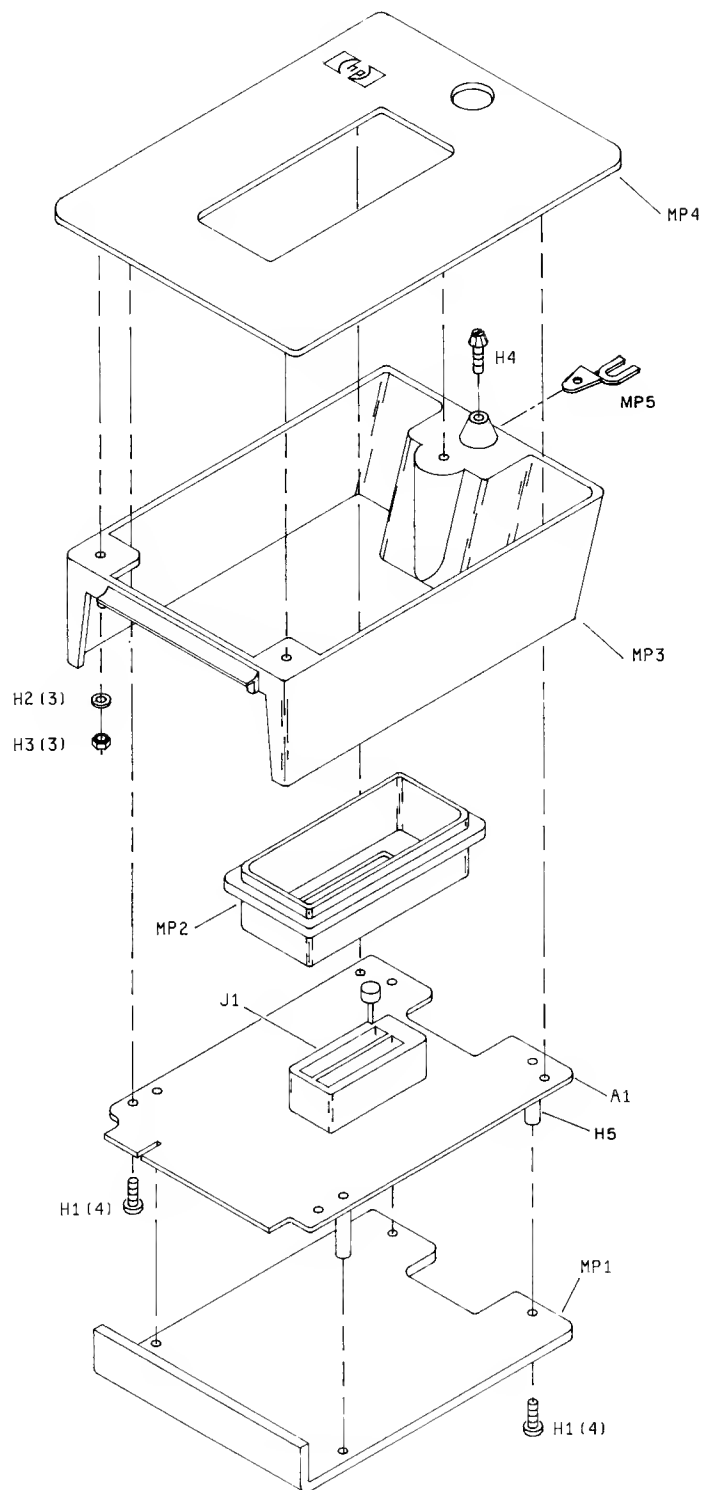


Figure 8-4. Model 64515C Illustrated Parts Breakdown


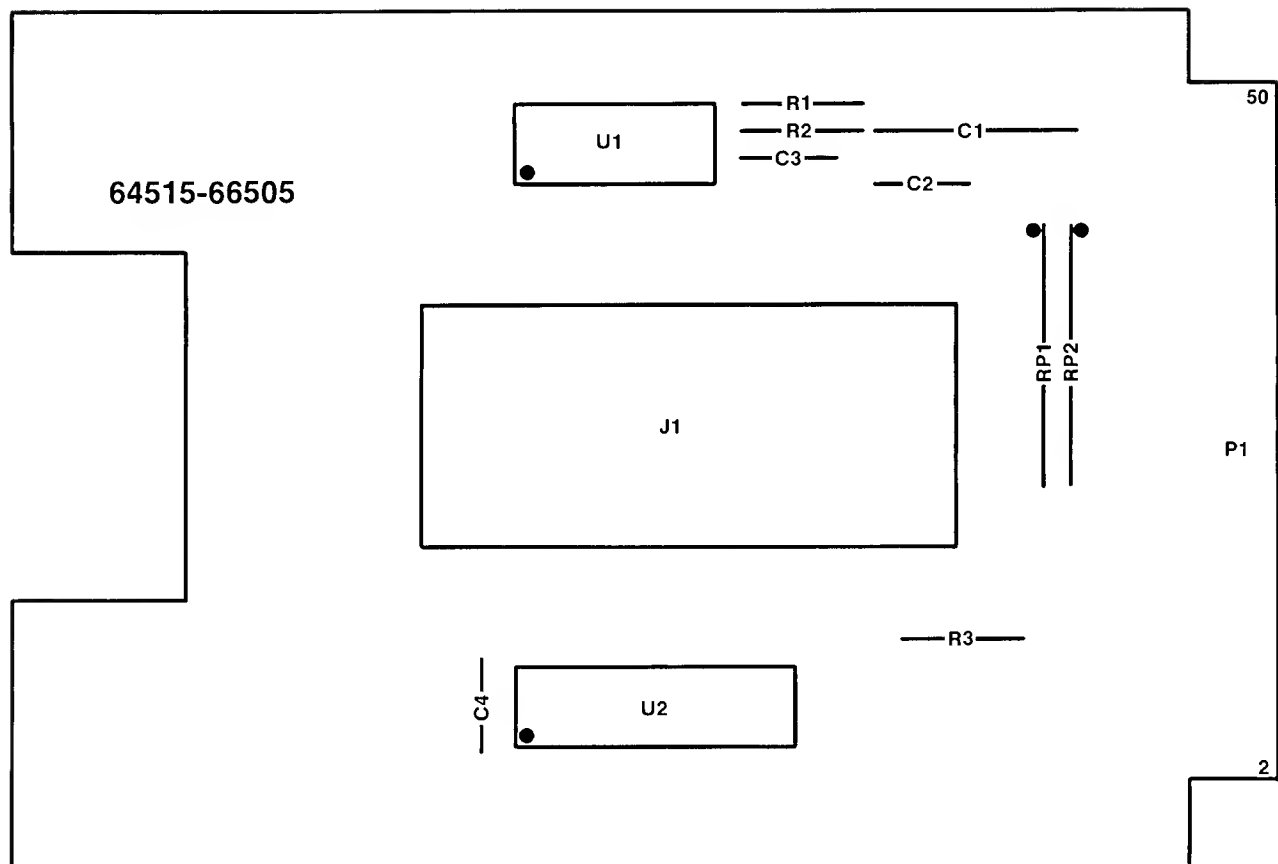


Figure 8-5. Model 64515C Component Locator



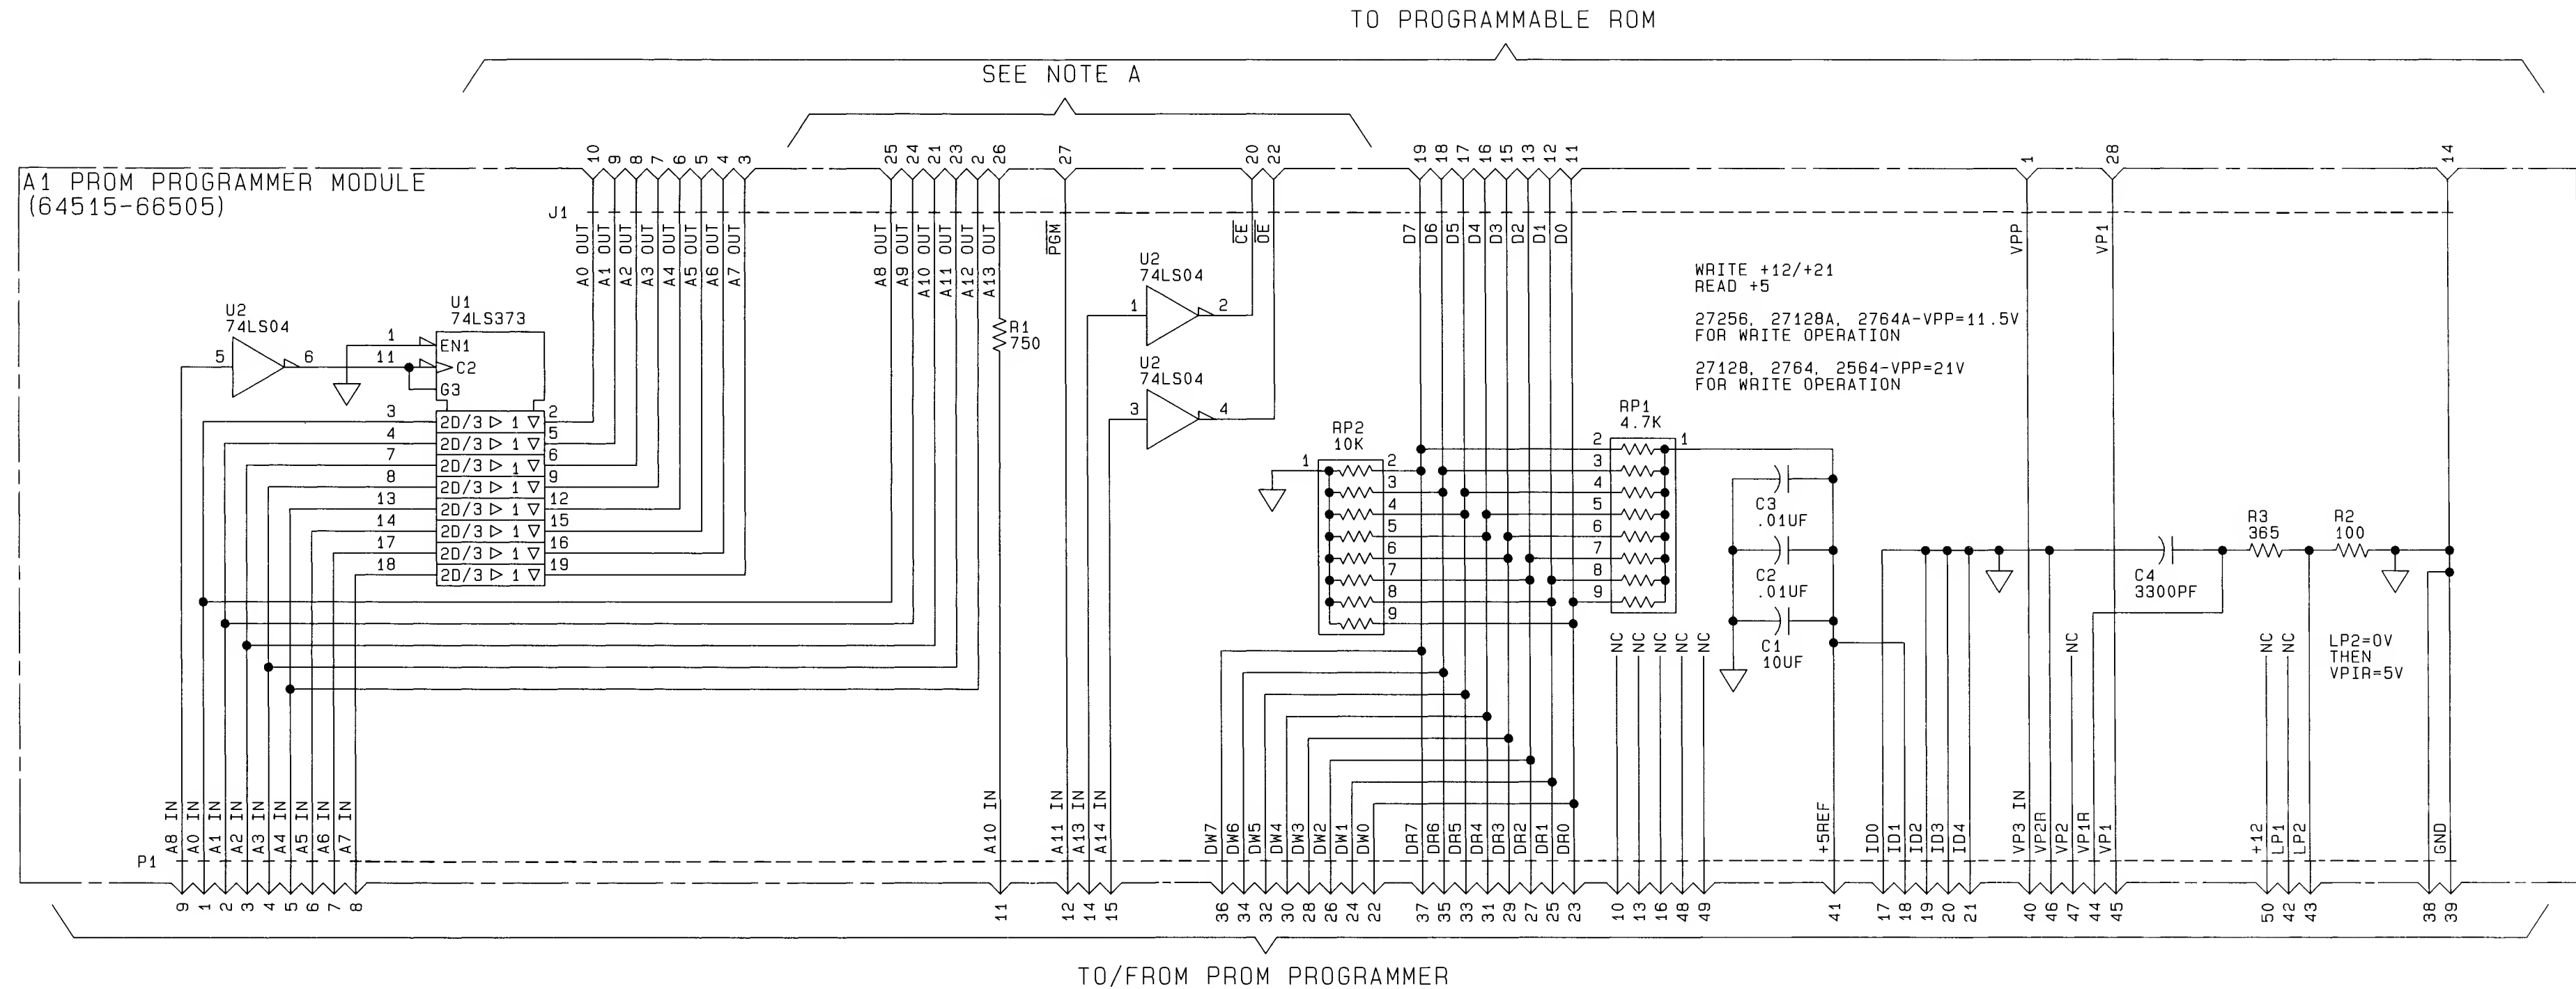


ICs ON THIS SCHEMATIC		
Ref Desig	HP Part No.	Mfr Part No.
U1	1820-2102	74S373
U2	1820-1149	74S04

**PARTS ON THIS SCHEMATIC**

C1-4
J1
R1-3
RP1,2
U1,2

NOTE "A"		
IC	Pin To Function	
2764 2764A	22	OE
	20	CE
	27	PGM
	26	NC
	2	A12
	23	A11
2564	21	A10
	22	PD/PGM
	20	A11
	27	CS2
	26	Vcc
	2	CS1
27128 27128A	23	A12
	21	A10
	22	OE
	20	CE
	27	PGM
	26	A13
27256	2	A12
	23	A11
	21	A10
	22	OE
	20	CE
	27	A14
27256	26	A13
	2	A12
	23	A11
	21	A10

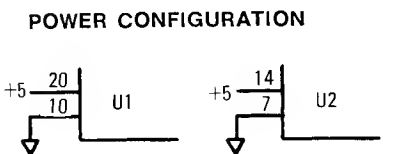



# SALES & SUPPORT OFFICES

Arranged alphabetically by country



## Product Line Sales/Support Key

Key Product Line

- A Analytical
- CM Components
- C Computer Systems Sales only
- CH Computer Systems Hardware Sales and Services
- CS Computer Systems Software Sales and Services
- E Electronic Instruments & Measurement Systems
- M Medical Products
- P Personal Computation Products
- \* Sales only for specific product line
- \*\* Support only for specific product line

**IMPORTANT:** These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

*HP distributors are printed in italics.*

## HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

### AFRICA AND

#### MIDDLE EAST

Hewlett-Packard S.A.  
Mediterranean and Middle East  
Operations  
Atrina Centre  
32 Kifissias Ave.  
Paradissos-Amarousion, **ATHENS**  
Greece  
Tel: 682 88 11  
Telex: 21-6588 HPAT GR  
Cable: HEWPACKSA Athens

### NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.  
7, Rue du Bois-du-Lan  
CH-1217 **MEYRIN** 2, Switzerland  
Tel: (022) 83 12 12  
Telex: 27835 hpse  
Cable: HEWPACKSA Geneva

### ASIA

Hewlett-Packard Asia Ltd.  
47/F, 26 Harbour Rd.,  
Wanchai, **HONG KONG**  
G.P.O. Box 863, Hong Kong  
Tel: 5-8330833  
Telex: 76793 HPA HX  
Cable: HPASIAL TD

### CANADA

Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
**MISSISSAUGA**, Ontario L4V 1M8  
Tel: (416) 678-9430  
Telex: 610-492-4246

### EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.  
Lieblgasse 1  
P.O. Box 72  
A-1222 **VIENNA**, Austria  
Tel: (222) 2365110  
Telex: 13 4425 HEPA A

### NORTHERN EUROPE

Hewlett-Packard S.A.  
Uilenstede 475  
P.O. Box 999  
NL-1180 **AZ AMSTELVEEN**  
The Netherlands  
Tel: 20 437771

### SOUTH EAST EUROPE

Hewlett-Packard S.A.  
World Trade Center  
110 Avenue Louis Carol  
1215 Cointrin, **GENEVA**, Switzerland  
Tel: (022) 98 96 51  
Telex: 27225 hpse.

### EASTERN USA

Hewlett-Packard Co.  
4 Choke Cherry Road  
**ROCKVILLE**, MD 20850  
Tel: (301) 258-2000

### MIDWESTERN USA

Hewlett-Packard Co.  
5201 Tollview Drive  
**ROLLING MEADOWS**, IL 60008  
Tel: (312) 255-9800

### SOUTHERN USA

Hewlett-Packard Co.  
2000 South Park Place  
P.O. Box 105005  
**ATLANTA**, GA 30348  
Tel: (404) 955-1500

### WESTERN USA

Hewlett-Packard Co.  
3939 Lankershim Blvd.  
P.O. Box 3919  
**LOS ANGELES**, CA 91604  
Tel: (213) 506-3700

## OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.  
Intercontinental Headquarters  
3495 Deer Creek Road  
**PALO ALTO**, CA 94304  
Tel: (415) 857-1501  
Telex: 034-8300  
Cable: HEWPACK

### ANGOLA

Teletra  
Empresa TAEcnica de Equipamentos  
R. Barbosa Rodrigues, 41-I DT.  
Caixa Postal 6487  
**LUANDA**  
Tel: 35515, 35516  
E,P

### ARGENTINA

Hewlett-Packard Argentina S.A.  
Avenida Santa Fe 2035  
Martinez 1640 **BUENOS AIRES**  
Tel: 798-5735, 792-1293  
Cable: HEWPACKARG  
A,E,CH,CS,P

### AUSTRALIA

#### Adelaide, South Australia

**Office**  
Hewlett-Packard Australia Ltd.  
153 Greenhill Road  
**PARKSIDE**, S.A. 5063  
Tel: 272-5911  
Telex: 82536  
Cable: HEWPARD Adelaide  
A\*,CH,CM,CS,E,M,P

#### Brisbane, Queensland

**Office**  
Hewlett-Packard Australia Ltd.  
10 Payne Road  
**THE GAP**, Queensland 4061  
Tel: 30-4133  
Telex: 42133  
Cable: HEWPARD Brisbane  
A,CH,CS,CM,E,M,P

#### Canberra, Australia

**Capital Territory Office**  
Hewlett-Packard Australia Ltd.  
121 Wollongong Street  
**FYSHWICK**, A.C.T. 2609  
Tel: 80 4244  
Telex: 62650  
Cable: HEWPARD Canberra  
C,CH,CM,CS,E,P

#### Melbourne, Victoria

**Office**  
Hewlett-Packard Australia Ltd.  
31-41 Joseph Street  
**BLACKBURN**, Victoria 3130  
Tel: 895-2895  
Telex: 31-024  
Cable: HEWPARD Melbourne  
A,CH,CM,CS,E,M,P

#### Perth, Western Australia

**Office**  
Hewlett-Packard Australia Ltd.  
261 Stirling Highway  
**CLAREMONT**, W.A. 6010  
Tel: 383-2188  
Telex: 93859  
Cable: HEWPARD Perth  
A,CH,CM,CS,E,M,P

### Sydney, New South

**Wales Office**  
Hewlett-Packard Australia Ltd.  
17-23 Talavera Road  
P.O. Box 308  
**NORTH RYDE**, N.S.W. 2113  
Tel: 888-4444  
Telex: 21561  
Cable: HEWPARD Sydney  
A,CH,CM,CS,E,M,P

### AUSTRIA

Hewlett-Packard Ges.m.b.h.  
Grottenhofstrasse 94  
A-8052 **GRAZ**  
Tel: (0316) 291 5 66  
Telex: 32375  
CH,E

Hewlett-Packard Ges.m.b.h.

Lieblgasse 1  
P.O. Box 72  
A-1222 **VIENNA**  
Tel: (0222) 23 65 11-0  
Telex: 134425 HEPA A  
A,CH,CM,CS,E,M,P

### BAHRAIN

Green Salon  
P.O. Box 557  
Manama  
**BAHRAIN**  
Tel: 255503-255950  
Telex: 84419  
P

Wael Pharmacy

P.O. Box 648  
**BAHRAIN**  
Tel: 256123  
Telex: 8550 WAEI BN  
E,M

### BELGIUM

Hewlett-Packard Belgium S.A./N.V.  
Blvd de la Woluwe, 100  
Woluwedael  
B-1200 **BRUSSELS**  
Tel: (02) 762-32-00  
Telex: 23-494 paloben bru  
A,CH,CM,CS,E,M,P

### BERMUDA

Applied Computer Technologies  
Atlantic House Building  
Par-La-Ville Road  
Hamilton 5  
Tel: 295-1616  
P

### BRAZIL

Hewlett-Packard do Brasil  
I.e.C. Ltda.  
Alameda Rio Negro, 750  
Alphaville  
06400 **BARUERI SP**  
Tel: (011) 421.1311  
Telex: (011) 33872 HPBR-BR  
Cable: HEWPACK Sao Paulo  
A,CH,CM,CS,E,M,P



# SALES & SUPPORT OFFICES

Arranged alphabetically by country

## BRAZIL (Cont'd)

Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Avenida Epitacio Pessoa, 4664  
22471 RIO DE JANEIRO-RJ  
Tel: (021) 286.0237  
Telex: 021-21905 HPBR-BR  
Cable: HEWPACK Rio de Janeiro  
A,CH,CM,E,M,P\*  
*Convex/Van Den*  
*Rua Jose Bonifacio*  
*458 Todos Os Santos*  
*CEP 20771*  
*RIO DE JANEIRO, RJ*  
Tel: 249-7121, 591-4946  
Telex: 33487

ANAMED I.C.E.I. Ltda.  
*Rua Bage, 103*  
*04012 SAO PAULO*  
Tel: (011) 570-5726  
Telex: 021-21905 HPBR-BR  
M

## CANADA

### Alberta

Hewlett-Packard (Canada) Ltd.  
3030 3rd Avenue N.E.  
CALGARY, Alberta T2A 6T7  
Tel: (403) 235-3100  
A,CH,CM,E\*,M,P\*  
Hewlett-Packard (Canada) Ltd.  
11120-178th Street  
EDMONTON, Alberta T5S 1P2  
Tel: (403) 486-6666  
A,CH,CM,CS,E,M,P

### British Columbia

Hewlett-Packard (Canada) Ltd.  
10691 Shellbridge Way  
RICHMOND,  
British Columbia V6X 2W7  
Tel: (604) 270-2277  
Telex: 610-922-5059  
A,CH,CM,CS,E\*,M,P\*  
Hewlett-Packard (Canada) Ltd.  
121 - 3350 Douglas Street  
VICTORIA, British Columbia V8Z 3L1  
Tel: (604) 381-6616  
CH,CS

### Manitoba

Hewlett-Packard (Canada) Ltd.  
1825 Inkster Blvd.  
WINNIPEG, Manitoba R3H 0Y1  
Tel: (204) 786-6701  
A,CH,CM,E,M,P\*

### New Brunswick

Hewlett-Packard (Canada) Ltd.  
37 Shediac Road  
MONCTON, New Brunswick E1A 2R6  
Tel: (506) 855-2841  
CH,CS

### Nova Scotia

Hewlett-Packard (Canada) Ltd.  
Suite 111  
900 Windmill Road  
DARTMOUTH, Nova Scotia B2Y 3Z6  
Tel: (902) 469-7820  
CH,CM,CS,E\*,M,P\*

## Ontario

Hewlett-Packard (Canada) Ltd.  
3325 N. Service Rd., Unit 6  
BURLINGTON, Ontario P3A 2A3  
Tel: (416) 335-8644  
CS,M\*  
Hewlett-Packard (Canada) Ltd.  
496 Days Road  
KINGSTON, Ontario K7M 5R4  
Tel: (613) 384-2088  
CH,CS

Hewlett-Packard (Canada) Ltd.  
552 Newbold Street  
LONDON, Ontario N6E 2S5  
Tel: (519) 686-9181  
A,CH,CM,E\*,M,P\*

Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
MISSISSAUGA, Ontario L4V 1M8  
Tel: (416) 678-9430  
A,CH,CM,CS,E,M,P

Hewlett-Packard (Canada) Ltd.  
2670 Queensview Dr.  
OTTAWA, Ontario K2B 8K1  
Tel: (613) 820-6483  
A,CH,CM,CS,E\*,MS,P\*  
Hewlett-Packard (Canada) Ltd.  
1855 Lasalle Boulevard  
SUDBURY, Ontario, P3A 2A3  
Tel: (705) 560-5450  
CH

Hewlett-Packard (Canada) Ltd.  
220 Yorkland Blvd. Unit #11  
WILLOWDALE, Ontario M2J 1R5  
Tel: (416) 499-9333  
CH

## Quebec

Hewlett-Packard (Canada) Ltd.  
17500 South Service Road  
Trans-Canada Highway  
KIRKLAND, Quebec H9J 2M5  
Tel: (514) 697-4232  
A,CH,CM,CS,E,M,P\*  
Hewlett-Packard (Canada) Ltd.  
1150 Rue Claire Fontaine  
QUEBEC CITY, Quebec G1R 5G4  
Tel: (418) 648-0726  
CH,CS

Hewlett-Packard (Canada) Ltd.  
#7-130 Robin Crescent  
SASKATOON, Saskatchewan S7L 6M7  
Tel: (306) 242-3702  
CH,CS

## CHILE

ASC Ltda.  
*Austria 2041*  
*SANTIAGO*  
Tel: 223-5946, 223-6148  
Telex: 340192 ASC CK  
P,C  
*Jorge Calcagni y Cia. Ltda.*  
*Av. Italia 634 Santiago*  
*Casilla 16475*  
*SANTIAGO 9*  
Tel: 222-0222  
Telex: 440283 JCYCL CZ  
CM,E,M

Metrolab S.A.  
*Monjitas 454 of. 206*  
*SANTIAGO*  
Tel: 395752, 398296  
Telex: 340866 METLAB CK  
A

*Olympia (Chile) Ltda.*  
*Av. Rodrigo de Araya 1045*  
*Casilla 256-V*  
*SANTIAGO 21*  
Tel: 225-5044  
Telex: 340892 OLYMP  
Cable: Olympiachile Santiagochile  
CH,CS,P

## CHINA, People's

Republic of  
China Hewlett-Packard Co., Ltd.  
6th Floor, Sun Hung Kai Centre  
30 Harbour Road  
HONG KONG  
Tel: 5-8323211  
Telex: 36678 HEWPA HX  
A,C,CH,CS,E,M,P

*China Hewlett-Packard Rep. Office*  
*P.O. Box 418*  
*1A Lane 2, Luchang St.*  
*Beiwei Rd., Xuanwu District*  
*BEIJING*

Tel: 33-1947, 33-7426  
Telex: 22601 CTSHP CN  
Cable: 1920  
A,CH,CM,CS,E,P

## COLOMBIA

*InstrumentaciAOn*  
*H. A. Langebaek & Kier S.A.*  
*Carrera 4A No. 52A-26*  
*Apartado Aereo 6287*  
*BOGOTA 1, D.E.*  
Tel: 212-1466  
Telex: 44400 INST CO  
Cable: AARIS Bogota  
CM,E,M  
*Nefromedicas Ltda.*  
*Calle 123 No. 9B-31*  
*Apartado Aereo 100-958*  
*BOGOTA D.E., 10*  
Tel: 213-5267, 213-1615  
Telex: 43415 HEGAS CO  
A

*Procesa, S.A.*  
*CRA 7 No. 24-89 Piso 25*  
*Torre Colpatria*  
*Apartado Aereo No. 49667*  
*BOGOTA D.E.*  
Tel: 2344925, 2344958, 2344742  
Telex: 43127 COVER CO  
C,P

*Compumundo*  
*Avenida 15 # 107-80*  
*BOGOTA D.E.*  
Tel: 214-4458  
Telex: 45466 MARICO  
P

## COSTA RICA

*Cientifica Costarricense S.A.*  
*Avenida 2, Calle 5*  
*San Pedro de Montes de Oca*  
*Apartado 10159*  
*SAN JOSÉ*  
Tel: 24-38-20, 24-08-19  
Telex: 2367 GALGUR CR  
CM,E,M

## CYPRUS

*Telerexa Ltd.*  
*P.O. Box 4809*  
*14C Stassinos Avenue*  
*NICOSIA*  
Tel: 62698  
Telex: 2894 LEVIDO CY  
E,M,P

## DENMARK

Hewlett-Packard A/S  
Datavej 52  
DK-3460 BIRKEROD  
Tel: (02) 81-66-40  
Telex: 37409 hpas dk  
A,CH,CM,CS,E,M,P  
Hewlett-Packard A/S  
Rolighedsvej 32  
DK-8240 RISSKOV, Aarhus  
Tel: (06) 17-60-00  
Telex: 37409 hpas dk  
CH,E

## DOMINICAN REPUBLIC

*Microprog S.A.*  
*Juan Tomás Mejía y Cotes No. 60*  
*Arroyo Hondo*  
*SANTO DOMINGO*  
Tel: 565-6268  
Telex: 4510 ARENTA DR (RCA)  
P

## ECUADOR

*CYEDE Cia. Ltda.*  
*Avenida Eloy Alfaro 1749*  
*y Belgica*  
*Casilla 6423 CCI*  
*QUITO*  
Tel: 450-975, 243-052  
Telex: 2548 CYEDE ED  
CM,E,P  
*Hospitalar S.A.*  
*Robles 625*  
*Casilla 3590*  
*QUITO*  
Tel: 545-250, 545-122  
Telex: 2485 HOSPTL ED  
Cable: HOSPITALAR-Quito  
M

## QUITO

Tel: 2-238-951  
Telex: 2298 ECUAME ED

## EGYPT

*Egyptian International*  
*Office for Foreign Trade*  
*P.O. Box 2558*  
*42 El-Zahraa Street*  
*Dokki, CAIRO,*  
Tel: 712230  
Telex: 93337 EGPOR UN  
Cable: EGYPOR  
P,A



## EGYPT (Cont'd)

### INFORMATIC FOR SYSTEMS

22 Talaat Harb Street

#### CAIRO,

Tel: 759006

Telex: 93697 SAFLM UN

CS

International Engineering Associates

24 Hussein Hegazi Street

Kasr-el-Aini

#### CAIRO,

Tel: 23829, 21641

Telex: 93830 IEA UN

Cable: INTEGASSO

E

S.S.C. Medical

40 Gezerat El Arab Street

Mohandessin

#### CAIRO,

Tel: 803844, 805998, 810263

Telex: 20503 SSC UN

M\*

## EL SALVADOR

IPESA de El Salvador S.A.

29 Avenida Norte 1216

#### SAN SALVADOR

Tel: 26-6858, 26-6868

Telex: 20539 IPESASAL

A,CH,CM,CS,E,P

## FINLAND

Hewlett-Packard Oy

Piispankalliontie 17

02200 ESPOO

Tel: 00358-0-88721

Telex: 121563 HEWPA SF

CH,CM,SS,P

Hewlett-Packard Oy

(Olarinluoma 7)

PL 24

02101 ESPOO 10

Tel: (90) 4521022

A,E,M

Hewlett-Packard Oy

Aatoksenkatu 10-C

SF-40720-72 JYVASKYLA

Tel: (941) 216318

CH

Hewlett-Packard Oy

Kainvuntie 1-C

SF-90140-14 OULU

Tel: (981) 338785

CH

## FRANCE

Hewlett-Packard France

Z.I. Mercure B

Rue Berthelot

F-13763 Les Milles Cedex

#### AIX-EN-PROVENCE

Tel: (42) 59-41-02

Telex: 410770F

A,CH,E,M,P\*

Hewlett-Packard France

64, rue Marchand Saillant

F-61000 ALENCON

Tel: (33) 29 04 42

Hewlett-Packard France

Boite Postale 503

F-25026 BESANCON

28 rue de la Republique

F-25000 BESANCON

Tel: (81) 83-16-22

Telex: 361157

CH,M

Hewlett-Packard France

13, Place Napoleon III

F-29000 BREST

Tel: (98) 03-38-35

Hewlett-Packard France

Chemin des Mouilles

Boite Postale 162

F-69130 ECULLY Cedex (Lyon)

Tel: (78) 833-81-25

Telex: 310617F

A,CH,CS,E,M

Hewlett-Packard France

Parc d'Activite du Bois Briard

Ave. du Lac

F-91040 EVRY Cedex

Tel: 6 077-8383

Telex: 692315F

E

Hewlett-Packard France

5, Avenue Raymond Chanas

F-38320 EYBENS (Grenoble)

Tel: (76) 62-67-98

Telex: 980124 HP GRENOB EYBE

CH

Hewlett-Packard France

Centre d'Affaire Paris-Nord

Bâtiment Ampère 5 étage

Rue de la Commune de Paris

Boite Postale 300

F-93153 LE BLANC MESNIL

Tel: (1) 865-44-52

Telex: 211032F

CH,CS,E,M

Hewlett-Packard France

Parc d'Activités Cadere

Quartier Jean Mermoz

Avenue du Président JF Kennedy

F-33700 MERIGNAC (Bordeaux)

Tel: (56) 34-00-84

Telex: 550105F

CH,E,M

Hewlett-Packard France

Immueble "Les 3 B"

Nouveau Chemin de la Garde

ZAC de Bois Briard

F-44085 NANTES Cedex

Tel: (40) 50-32-22

Telex: 711085F

CH\*\*

Hewlett-Packard France

125, rue du Faubourg Bannier

F-45000 ORLEANS

Tel: (38) 68 01 63

Hewlett-Packard France

Zone Industrielle de Courtaboeuf

Avenue des Tropiques

F-91947 Les Ulis Cedex ORSAY

Tel: (6) 907-78-25

Telex: 600048F

A,CH,CM,CS,E,M,P

Hewlett-Packard France

Paris Porte-Maillet

15, Avenue de L'Amiral Bruix

F-75782 PARIS CEDEX 16

Tel: (1) 502-12-20

Telex: 613663F

CH,M,P

Hewlett-Packard France

124, Boulevard Tourasse

F-64000 PAU

Tel: (59) 80 38 02

Hewlett-Packard France

2 Allée de la Bourgonnette

F-35100 RENNES

Tel: (99) 51-42-44

Telex: 740912F

CH,CM,E,M,P\*

Hewlett-Packard France

98 Avenue de Bretagne

F-76100 ROUEN

Tel: (35) 63-57-66

Telex: 770035F

CH\*\*,CS

Hewlett-Packard France

4 Rue Thomas Mann

Boite Postale 56

F-67033 STRASBOURG Cedex

Tel: (88) 28-56-46

Telex: 890141F

CH,E,M,P\*

Hewlett-Packard France

Le PAEripole

20, Chemin du Pigeonnier de la

CAEpiGEere

F-31083 TOULOUSE Cedex

Tel: (61) 40-11-12

Telex: 531639F

A,CH,CS,E,P\*

Hewlett-Packard France

9, rue Baudin

F-26000 VALENCE

Tel: (75) 42 76 16

Hewlett-Packard France

Carolor

ZAC de Bois Briard

F-57640 VIGY (Metz)

Tel: (8) 771 20 22

CH

Hewlett-Packard France

Immeuble PEriceentre

F-59658 VILLENEUVE D'ASCQ Cedex

Tel: (20) 91-41-25

Telex: 160124F

CH,E,M,P\*

## GERMAN FEDERAL

### REPUBLIC

Hewlett-Packard GmbH

Geschäftsstelle

Keithstrasse 2-4

D-1000 BERLIN 30

Tel: (030) 24-90-86

Telex: 018 3405 hpbln d

A,CH,E,M,P

Hewlett-Packard GmbH

Geschäftsstelle

Herrenberger Strasse 130

D-7030 BÖBLINGEN

Tel: (7031) 14-0

Telex: 07265739

A,CH,CM,CS,E,M,P

Hewlett-Packard GmbH

Geschäftsstelle

Emanuel-Leutze-Strasse 1

D-4000 DUSSELDORF

Tel: (0211) 5971-1

Telex: 085/86 533 hpdd d

A,CH,CS,E,M,P

Hewlett-Packard GmbH

Geschäftsstelle

Schleefstr. 28a

D-4600 DORTMUND-Aplerbeck

Tel: (0231) 45001

Hewlett-Packard GmbH

Vertriebszentrale Frankfurt

Berner Strasse 117

Postfach 560 140

D-6000 FRANKFURT 56

Tel: (0611) 50-04-1

Telex: 04 13249 hpffm d

A,CH,CM,CS,E,M,P

Hewlett-Packard GmbH

Geschäftsstelle

Aussenstelle Bad Homburg

Louisenstrasse 115

D-6380 BAD HOMBURG

Tel: (06172) 109-0

Hewlett-Packard GmbH

Geschäftsstelle

Kapstadtring 5

D-2000 HAMBURG 60

Tel: (040) 63804-1

Telex: 021 63 032 hphh d

A,CH,CS,E,M,P

Hewlett-Packard GmbH

Geschäftsstelle

Heidering 37-39

D-3000 HANNOVER 61

Tel: (0511) 5706-0

Telex: 092 3259

A,CH,CM,E,M,P

Hewlett-Packard GmbH

Geschäftsstelle

Rosslauer Weg 2-4

D-6800 MANNHEIM

Tel: (0621) 70050

Telex: 0462105

A,C,E

Hewlett-Packard GmbH

Geschäftsstelle

Messerschmittstrasse 7

D-7910 NEU ULM

Tel: 0731-70241

Telex: 0712816 HP ULM-D

A,C,E\*

Hewlett-Packard GmbH

Geschäftsstelle

Ehhericherstr. 13

D-8500 NÜRNBERG 10

Tel: (0911) 5205-0

Telex: 0623 860

CH,CM,E,M,P

Hewlett-Packard GmbH

Geschäftsstelle

Eschenstrasse 5

D-8028 TAUFKIRCHEN

Tel: (089) 6117-1

Telex: 0524985

A,CH,CM,E,M,P

## GREAT BRITAIN



# SALES & SUPPORT OFFICES

Arranged alphabetically by country

## GREECE

Hewlett-Packard A.E.  
178, Kifissias Avenue  
6th Floor  
Halandri-ATHENS  
Greece  
Tel: 6471673, 6471543, 6472971  
A,CH,CM\*,CS\*,E,M,P

Kostas Karayannis S.A.  
8 Omirou Street  
ATHENS 133  
Tel: 32 30 303, 32 37 371  
Telex: 215962 RKAR GR  
A,CH,CM,CS,E,M,P

PLAISIO S.A.  
Eliopoulos Brohers Ltd.  
11854  
ATHENS  
Tel: 34-51-911  
Telex: 216286  
P

## GUATEMALA

IPESA  
Avenida Reforma 3-48, Zona 9  
GUATEMALA CITY  
Tel: 316627, 314786  
Telex: 4192 TELTRO GU  
A,CH,CM,CS,E,M,P

## HONG KONG

Hewlett-Packard Hong Kong, Ltd.  
G.P.O. Box 795  
5th Floor, Sun Hung Kai Centre  
30 Harbour Road  
HONG KONG  
Tel: 5-8323211  
Telex: 66678 HEWPA HX  
Cable: HEWPACK HONG KONG  
E,CH,CS,P

CET Ltd.  
10th Floor, Hua Asia  
Bldg. Gloucester  
64-66 Gloucester Road  
HONG KONG  
Tel: (5) 200922  
Telex: 85148 CET HX  
CM

Schmidt & Co. (Hong Kong) Ltd.  
18th Floor, Great Eagle Centre  
23 Harbour Road, Wanchai

HONG KONG  
Tel: 5-8330222  
Telex: 74766 SCHMC HX  
A,M

## ICELAND

Elding Trading Company Inc.  
Hafnarnvolf-Tryggvagotu  
P.O. Box 895  
IS-REYKJAVIK  
Tel: 1-58-20, 1-63-03  
M

## INDIA

Computer products are sold through  
Blue Star Ltd. All computer repairs and  
maintenance service is done through  
Computer Maintenance Corp.

Blue Star Ltd.  
Sabri Complex II Floor  
24 Residency Rd.  
BANGALORE 560 025  
Tel: 55660  
Telex: 0845-430  
Cable: BLUESTAR  
A,CH\*,CM,CS\*,E

Blue Star Ltd.  
Band Box House  
Prabhadevi  
BOMBAY 400 025  
Tel: 422-3101  
Telex: 011-3751  
Cable: BLUESTAR  
A,M

Blue Star Ltd.  
Sahas  
414/2 Vir Savarkar Marg  
Prabhadevi  
BOMBAY 400 025  
Tel: 422-6155  
Telex: 011-71193  
Cable: FROSTBLUE  
A,CH\*,CM,CS\*,E,M  
Blue Star Ltd.  
Kalyan, 19 Vishwas Colony  
Alkपुरi, BORODA, 390 005  
Tel: 65235  
Cable: BLUE STAR  
A

Blue Star Ltd.  
7 Hare Street  
CALCUTTA 700 001  
Tel: 12-01-31  
Telex: 021-7655  
Cable: BLUESTAR  
A,M

Blue Star Ltd.  
133 Kodambakkam High Road  
MADRAS 600 034  
Tel: 82057  
Telex: 041-379  
Cable: BLUESTAR  
A,M

Blue Star Ltd.  
Bhandari House, 7th/8th Floors  
91 Nehru Place  
NEW DELHI 110 024  
Tel: 682547  
Telex: 031-2463  
Cable: BLUESTAR  
A,CH\*,CM,CS\*,E,M

Blue Star Ltd.  
15/16: C Wellesley Rd.  
PUNE 411 011  
Tel: 22775  
Cable: BLUE STAR  
A

Blue Star Ltd.  
2-2-47/1108 Bolarum Rd.  
SECUNDERABAD 500 003  
Tel: 72057  
Telex: 0155-459  
Cable: BLUEFROST  
A,E

Blue Star Ltd.  
T.C. 7/603 Poornima  
Maruthankuzhi  
TRIVANDRUM 695 013  
Tel: 65799  
Telex: 0884-259  
Cable: BLUESTAR  
E

Computer Maintenance Corporation Ltd.  
115, Sarojini Devi Road  
SECUNDERABAD 500 003  
Tel: 310-184, 345-774  
Telex: 031-2960  
CH\*\*

## INDONESIA

BERCA Indonesia P.T.  
P.O. Box 496/Jkt.  
Jl. Abdul Muis 62  
JAKARTA  
Tel: 21-373009  
Telex: 46748 BERSAL IA  
Cable: BERSAL JAKARTA  
P

BERCA Indonesia P.T.  
P.O. Box 2497/Jkt  
Antara Bldg., 17th Floor  
Jl. Medan Merdeka Selatan 17  
JAKARTA-PUSAT  
Tel: 21-344-181  
Telex: BERSAL IA  
A,CS,E,M

BERCA Indonesia P.T.  
P.O. Box 174/SBY.  
Jl. Kutei No. 11  
SURABAYA  
Tel: 68172  
Telex: 31146 BERSAL SB  
Cable: BERSAL-SURABAYA  
A\*,E,M,P

## IRAQ

Hewlett-Packard Trading S.A.  
Service Operation  
Al Mansoor City 9B/3/7  
BAGHDAD  
Tel: 551-49-73  
Telex: 212-455 HEPAIRAQ IK  
CH,CS

## IRELAND

Hewlett-Packard Ireland Ltd.  
82/83 Lower Leeson Street  
DUBLIN 2  
Tel: 0001 608800  
Telex: 30439  
A,CH,CM,CS,E,M,P  
Cardiac Services Ltd.  
Kilmore Road  
Artane  
DUBLIN 5  
Tel: (01) 351820  
Telex: 30439  
M

## ISRAEL

Eldan Electronic Instrument Ltd.  
P.O. Box 1270  
JERUSALEM 91000  
16, Ohaliav St.  
JERUSALEM 94467  
Tel: 533 221, 553 242  
Telex: 25231 AB/PAKRD IL  
A,M

Computation and Measurement  
Systems (CMS) Ltd.  
11 Masad Street  
67060  
TEL-AVIV  
Tel: 388 388  
Telex: 33569 Motil IL  
CH,CM,CS,E,P

## ITALY

Hewlett-Packard Italiana S.p.A.  
Traversa 99C  
Via Giulio Petroni, 19  
I-70124 BARI  
Tel: (080) 41-07-44  
M,CH  
Hewlett-Packard Italiana S.p.A.  
Via Martin Luther King, 38/III  
I-40132 BOLOGNA  
Tel: (051) 402394  
Telex: 511630  
CH,CS,E,M  
Hewlett-Packard Italiana S.p.A.  
Via Principe Nicola 43G/C  
I-95126 CATANIA  
Tel: (095) 37-10-87  
Telex: 970291  
CH

Hewlett-Packard Italiana S.p.A.  
Via G. Di Vittorio 9  
I-20063 CERNUSCO SUL  
NAVIGLIO  
(Milano)  
Tel: (02) 923691  
Telex: 334632  
A,CH,CM,CS,E,M,P  
Hewlett-Packard Italiana S.p.A.  
Via C. Colombo 49  
I-20090 TREZZANO SUL  
NAVIGLIO  
(Milano)  
Tel: (02) 4459041  
Telex: 322116  
CH,CS

Hewlett-Packard Italiana S.p.A.  
Via Nuova San Rocco a  
Capodimonte, 62/A  
I-80131 NAPOLI  
Tel: (081) 7413544  
Telex: 710698  
A\*\*,CH,CS,E,M  
Hewlett-Packard Italiana S.p.A.  
Viale G. Modugno 33  
I-16156 GENOVA PEGLI  
Tel: (010) 68-37-07  
Telex: 215238  
E,C

Hewlett-Packard Italiana S.p.A.  
Via Pelizzo 15  
I-35128 PADOVA  
Tel: (049) 664888  
Telex: 430315  
A,CH,CS,E,M  
Hewlett-Packard Italiana S.p.A.  
Viale C. Pavese 340  
I-00144 ROMA EUR  
Tel: (06) 54831  
Telex: 610514  
A,CH,CS,E,M,P\*



## ITALY (Cont'd)

Hewlett-Packard Italiana S.p.A.  
Via di Casellina 57/C  
I-50018 **SCANDICCI-FIRENZE**  
Tel: (055) 753863  
CH,E,M

Hewlett-Packard Italiana S.p.A.  
Corso Svizzera, 185  
I-10144 **TORINO**  
Tel: (011) 74 4044  
Telex: 221079  
A\*,CS,CH,E

## JAPAN

Yokogawa-Hewlett-Packard Ltd.  
152-1, Onna  
**ATSUGI**, Kanagawa, 243  
Tel: (0462) 28-0451  
CM,C\*,E

Yokogawa-Hewlett-Packard Ltd.  
Meiji-Seimei Bldg. 6F  
3-1 Hon Chiba-Cho  
**CHIBA**, 280  
Tel: 472 25 7701  
E,CH,CS

Yokogawa-Hewlett-Packard Ltd.  
Yasuda-Seimei Hiroshima Bldg.  
6-11, Hon-dori, Naka-ku  
**HIROSHIMA**, 730  
Tel: 82-241-0611

Yokogawa-Hewlett-Packard Ltd.  
Towa Building  
2-3, Kaigan-dori, 2 Chome Chuo-ku  
**KOBE**, 650  
Tel: (078) 392-4791  
C,E

Yokogawa-Hewlett-Packard Ltd.  
Kumagaya Asahi 82 Bldg  
3-4 Tsukuba  
**KUMAGAYA**, Saitama 360  
Tel: (0485) 24-6563  
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.  
Asahi Shinbun Daiichi Seimei Bldg.  
4-7, Hanabata-cho  
**KUMAMOTO**, 860  
Tel: (0963) 54-7311  
CH,E

Yokogawa-Hewlett-Packard Ltd.  
Shin-Kyoto Center Bldg.  
614, Higashi-Shiokoji-cho  
Karasuma-Nishiiru  
Shiokoji-dori, Shimogyo-ku  
**KYOTO**, 600  
Tel: 075-343-0921  
CH,E

Yokogawa-Hewlett-Packard Ltd.  
Mito Mitsui Bldg  
4-73, Sanno-maru, 1 Chome  
**MITO**, Ibaraki 310  
Tel: (0292) 25-7470  
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.  
Meiji-Seimei Kokubun Bldg. 7-8  
Kokubun, 1 Chome, Sendai  
**MIYAGI**, 980  
Tel: (0222) 25-1011  
Telex:  
C,E

Yokogawa-Hewlett-Packard Ltd.  
Sumitomo Seimei 14-9 Bldg.  
Meieki-Minami, 2 Chome  
Nakamura-ku  
**NAGOYA**, 450  
Tel: (052) 571-5171  
CH,CM,CS,E,M  
Yokogawa-Hewlett-Packard Ltd.  
Chuo Bldg.,  
4-20 Nishinakajima, 5 Chome  
Yodogawa-ku  
**OSAKA**, 532  
Tel: (06) 304-6021  
Telex: YHPOSA 523-3624  
A,CH,CM,CS,E,M,P\*

Yokogawa-Hewlett-Packard Ltd.  
27-15, Yabe, 1 Chome  
**SAGAMIHARA** Kanagawa, 229  
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.  
Daiichi Seimei Bldg.  
7-1, Nishi Shinjuku, 2 Chome  
Shinjuku-ku, **TOKYO** 160  
Tel: 03-348-4611  
CH,E

Yokogawa-Hewlett-Packard Ltd.  
29-21 Takaide-Higashi, 3 Chome  
Suginami-ku **TOKYO** 168  
Tel: (03) 331-6111  
Telex: 232-2024 YHPTOK  
A,CH,CM,CS,E,M,P\*

Yokogawa-Hewlett-Packard Ltd.  
Daiichi Asano Building  
2-8, Odori, 5 Chome  
**UTSUNOMIYA**, Tochigi 320  
Tel: (0286) 25-7155  
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.  
Yasuda Seimei Nishiguchi Bldg.  
30-4 Tsuruya-cho, 3 Chome  
**YOKOHAMA** 221  
Tel: (045) 312-1252  
CH,CM,E

## JORDAN

Scientific and Medical Supplies Co.  
P.O. Box 1387

## AMMAN

Tel: 24907, 39907  
Telex: 21456 SABCO JO  
CH,E,M,P

## KENYA

ADCOM Ltd., Inc., Kenya  
P.O. Box 30070

## NAIROBI

Tel: 331955  
Telex: 22639  
E,M

## KOREA

Samsung Hewlett-Packard Co. Ltd.  
12 Fl. Kinam Bldg.  
San 75-31, Yeoksam-Dong  
Kangnam-Ku  
Yeongdong P.O. Box 72  
**SEOUL**  
Tel: 555-7555, 555-5447  
Telex: K27364 SAMSAN  
A,CH,CM,CS,E,M,P

## KUWAIT

Al-Khaldiya Trading & Contracting  
P.O. Box 830

## SAFAT

Tel: 424910, 411726  
Telex: 22481 AREEG KT  
Cable: VISCOUNT  
E,M,A

Photo & Cine Equipment  
P.O. Box 270

## SAFAT

Tel: 2445111  
Telex: 22247 MATIN KT  
Cable: MATIN KUWAIT  
P

W.J. Towell Computer Services  
P.O. Box 75

## SAFAT

Tel: 2462640/1  
Telex: 30336 TOWELL KT  
C

## LEBANON

Computer Information Systems  
P.O. Box 11-6274

## BEIRUT

Tel: 89 40 73  
Telex: 42309  
C,E,M,P

## LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.  
Blvd de la Woluwe, 100  
Woluwedal  
B-1200 **BRUSSELS**  
Tel: (02) 762-32-00  
Telex: 23-494 paloben bru  
A,CH,CM,CS,E,M,P

## MALAYSIA

Hewlett-Packard Sales (Malaysia)  
Sdn. Bhd.  
1st Floor, Bangunan British  
American  
Jalan Semantan, Damansara Heights  
**KUALA LUMPUR** 23-03  
Tel: 943022

Telex: MA31011  
A,CH,E,M,P\*

## Protel Engineering

P.O. Box 1917  
Lot 6624, Section 64  
23/4 Pending Road  
Kuching, **SARAWAK**  
Tel: 36299

Telex: MA 70904 PROMAL  
Cable: PROTELENG  
A,E,M

## MALTA

Philip Toledo Ltd.  
Notabile Rd.

## MRIHEL

Tel: 447 47, 455 66  
Telex: Media MW 649  
E,P,M

## MEXICO

Hewlett-Packard Mexicana, S.A.  
de C.V.  
Av. Periferico Sur No. 6501  
Tepepan, Xochimilco  
16020 **MEXICO D.F.**  
Tel: 6-76-46-00  
Telex: 17-74-507 HEWPACK MEX  
A,CH,CS,E,M,P

Hewlett-Packard Mexicana, S.A.  
de C.V.  
Czda. del Valle  
409 Ote. 1 °Piso  
Colonia del Valle  
Municipio de Garza García  
66220 **MONTERREY**, Nuevo LeAOn  
Tel: 78 42 41  
Telex: 038 410  
CH

Equipos Científicos de Occidente, S.A.  
Av. Lazaro Cardenas 3540

## GUADALAJARA

Tel: 21-66-91  
Telex: 0684186 ECOME  
A

Infograficas y Sistemas del Noreste, S.A.  
Rio Orinoco #171 Oriente

Despacho 2001

Colonia Del Valle

## MONTERREY

Tel: 782499, 781259A  
A

## MOROCCO

Dolbeau  
81 rue Karatchi  
**CASABLANCA**  
Tel: 3041-82, 3068-38  
Telex: 23051, 22822  
E

## Gerep

2 rue d'Agadir  
Boite Postale 156  
**CASABLANCA**  
Tel: 272093, 272095  
Telex: 23 739  
P

Sema-Maroc

Rue Lapebie

## CASABLANCA

Tel: 26.09.80  
CH,CS,P

## NETHERLANDS

Hewlett-Packard Nederland B.V.  
Van Heuven Goedhartlaan 121  
NL 1181KK **AMSTELVEEN**  
P.O. Box 667  
NL1180 AR **AMSTELVEEN**  
Tel: (020) 47-20-21  
Telex: 13 216 HEPAC NL  
A,CH,CM,CS,E,M,P

Hewlett-Packard Nederland B.V.  
Bongerd 2  
NL 2906VK **CAPELLE A/D IJSSEL**  
P.O. Box 41  
NL 2900AA **CAPELLE A/D IJSSEL**  
Tel: (10) 51-64-44  
Telex: 21261 HEPAC NL  
A,CH,CS,E

Hewlett-Packard Nederland B.V.  
Pastoor Petersstraat 134-136  
NL 5612 LV **EINDHOVEN**  
P.O. Box 2342  
NL 5600 CH **EINDHOVEN**  
Tel: (040) 326911  
Telex: 51484 hepae nl  
A,CH\*\*,E,M



# SALES & SUPPORT OFFICES

Arranged alphabetically by country

## NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.

5 Owens Road

P.O. Box 26-189

Epsom, AUCKLAND

Tel: 687-159

Cable: HEWPAK Auckland

CH,CS,CM,E,P\*

Hewlett-Packard (N.Z.) Ltd.

4-12 Cruickshank Street

Kilbirnie, WELLINGTON 3

P.O. Box 9443

Courtenay Place, WELLINGTON 3

Tel: 877-199

Cable: HEWPAK Wellington

CH,CS,CM,E,P

Northrop Instruments & Systems Ltd.

369 Khyber Pass Road

P.O. Box 8602

AUCKLAND

Tel: 794-091

Telex: 60605

A,M

Northrop Instruments & Systems Ltd.

110 Mandeville St.

P.O. Box 8388

CHRISTCHURCH

Tel: 488-873

Telex: 4203

A,M

Northrop Instruments & Systems Ltd.

Sturdee House

85-87 Ghuznee Street

P.O. Box 2406

WELLINGTON

Tel: 850-091

Telex: NZ 3380

A,M

## NORTHERN IRELAND

See United Kingdom

## NORWAY

Hewlett-Packard Norge A/S

Folke Bernadottes vei 50

P.O. Box 3558

N-5033 FYLLINGSDALEN (Bergen)

Tel: 0047/51 16 55 40

Telex: 16621 hpnas n

CH,CS,E,M

Hewlett-Packard Norge A/S

UCOsterndalen 16-18

P.O. Box 34

N-1345 OCUSTERÅS

Tel: 0047/2/17 11 80

Telex: 16621 hpnas n

A,CH,CM,CS,E,M,P

## OMAN

Khimji Ramdas

P.O. Box 19

MUSCAT

Tel: 722225, 745601

Telex: 3289 BROKER MB MUSCAT

P

Suhail & Saud Bahwan

P.O. Box 169

MUSCAT

Tel: 734 201-3

Telex: 3274 BAHWAN MB

E

Imtac LLC

P.O. Box 8676

MUTRAH

Tel: 601695

Telex: 5741 Tawoos On

A,C,M

## PAKISTAN

Mushko & Company Ltd.

House No. 16, Street No. 16

Sector F-6/3

ISLAMABAD

Tel: 824545

Cable: FEMUS Islamabad

A,E,M,P\*

Mushko & Company Ltd.

Oosman Chambers

Abdullah Haroon Road

KARACHI 0302

Tel: 524131, 524132

Telex: 2894 MUSKO PK

Cable: COOPERATOR Karachi

A,E,M,P\*

## PANAMA

ElectrOnico Balboa, S.A.

Calle Samuel Lewis, Ed. Alfa

Apartado 4929

PANAMA 5

Tel: 63-6613, 63-6748

Telex: 3483 ELECTRON PG

A,CM,E,M,P

## PERU

Cía Electro Médica S.A.

Los Flamencos 145, San Isidro

Casilla 1030

LIMA 1

Tel: 41-4325, 41-3703

Telex: Pub. Booth 25306

CM,E,M,P

## SAMS

Rio De La Plata 305

SAN ISIDRO

Tel: 419928

Telex: 394 20450 PELIBERTAD

P

## PHILIPPINES

The Online Advanced Systems

Corporation

Rico House, Amorsolo Cor. Herrera

Street

Legaspi Village, Makati

P.O. Box 1510

Metro MANILA

Tel: 815-38-11 (up to 16)

Telex: 63274 Online PN

A,CH,CS,E,M

Electronic Specialists and

Proponents Inc.

690-B Epifanio de los Santos

Avenue

Cubao, QUEZON CITY

P.O. Box 2649 Manila

Tel: 98-96-81, 98-96-82, 98-96-83

Telex: 40018, 42000 ITT GLOBE MAC-

KAY BOOTH

P

## PORTUGAL

Mundinter

Intercambio Mundial de ComAercio

S.A.R.L.

P.O. Box 2761

Av. Antonio Augusto de Aguiar 138

P-LISBON

Tel: (19) 53-21-31, 53-21-37

Telex: 16691 munter p

M

Soquimica

Av. da Liberdade, 220-2

1298 LISBOA Codex

Tel: 56 21 81/2/3

Telex: 13316 SABASA

P

Telectra-Empresa Técnica de

Equipmentos Eléctricos S.A.R.L.

Rua Rodrigo da Fonseca 103

P.O. Box 2531

P-LISBON 1

Tel: (19) 68-60-72

Telex: 12598

CM,E

Rarcentro Ltda

R. Costa Cabral 575

4200 PORTO

Tel: 499174/495173

Telex: 26054

CH,CS

## PUERTO RICO

Hewlett-Packard Puerto Rico

101 MuANoz Rivera Av

Esu. Calle Ochoa

HATO REY, Puerto Rico 00918

Tel: (809) 754-7800

A,CH,CS,CM,M,E,P

## QATAR

Computer Arabia

P.O. Box 2750

DOHA

Tel: 883555

Telex: 4806 CHPARB

P

Nasser Trading & Contracting

P.O. Box 1563

DOHA

Tel: 422170

Telex: 4439 NASSER DH

M

## SAUDI ARABIA

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 281

Thuobah

AL-KHOBAR

Tel: 895-1760, 895-1764

Telex: 671 106 HPMEEK SJ

Cable: ELECTA AL-KHOBAR

CH,CS,E,M

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 1228

Redec Plaza, 6th Floor

JEDDAH

Tel: 644 38 48

Telex: 4027 12 FARNAS SJ

Cable: ELECTA JEDDAH

A,CH,CS,CM,E,M,P

Modern Electronic Establishment

Hewlett-Packard Division

P.O. Box 22015

RIYADH

Tel: 491-97 15, 491-63 87

Telex: 202049 MEERYD SJ

CH,CS,E,M

Abdul Ghani El Ajou

P.O. Box 78

RIYADH

Tel: 40 41 717

Telex: 200 932 EL AJOU

P

## SCOTLAND

See United Kingdom

## SINGAPORE

Hewlett-Packard Singapore (Sales)

Pte. Ltd.

#08-00 Inchcape House

450-2 Alexandra Road

P.O. Box 58 Alexandra Rd. Post

Office

SINGAPORE, 9115

Tel: 631788

Telex: HPSGSO RS 34209

Cable: HEWPAK, Singapore

A,CH,CS,E,MS,P

Dynamar International Ltd.

Unit 05-11 Block 6

Kolam Ayer Industrial Estate

SINGAPORE 1334

Tel: 747-6188

Telex: RS 26283

CM

## SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 120

Howard Place CAPE PROVINCE 7450

Pine Park Center, Forest Drive, Pine-

lands

CAPE PROVINCE 7405

Tel: 53-7954

Telex: 57-20006

A,CH,CM,E,M,P

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 37099

Overport Drive 92

DURBAN 4067

Tel: 28-4178

Telex: 6-22954

CH,CM

Hewlett-Packard So Africa (Pty.) Ltd.

6 Linton Arcade

511 Cape Road

Linton Grange

PORT ELIZABETH 6001

Tel: 041-301201

CH

Hewlett-Packard So Africa (Pty.) Ltd.

Fountain Center

Kalkden Str.

Monument Park

Ext 2

PRETORIA 0105

Tel: 45-5723

Telex: 32163

CH,E



## SOUTH AFRICA (Cont'd)

Hewlett-Packard So Africa (Pty.) Ltd.  
Private Bag Wendywood  
**SANDTON 2144**  
Tel: 802-5111, 802-5125  
Telex: 4-20877  
Cable: HEWPACK Johannesburg  
A,CH,CM,CS,E,M,P

## SPAIN

Hewlett-Packard Española S.A.  
Calle Entenza, 321  
**E-BARCELONA 29**  
Tel: 322.24.51, 321.73.54  
Telex: 52603 hpbee  
A,CH,CS,E,M,P

Hewlett-Packard Española S.A.  
Calle San Vicente S/No  
Edificio Albia II 7B  
**E-BILBAO 1**  
Tel: 423.83.06  
A,CH,E,M

Hewlett-Packard Española S.A.  
Crt. de la Coruña, Km. 16, 400  
Las Rozas  
**E-MADRID**  
Tel: (1) 637.00.11  
Telex: 23515 HPE  
CH,CS,M

Hewlett-Packard Española S.A.  
Avda. S. Francisco Javier, S/no  
Planta 10. Edificio Sevilla 2,  
**E-SEVILLA 5**  
Tel: 64.44.54  
Telex: 72933  
A,CS,M,P

Hewlett-Packard Española S.A.  
C/Isabel La Católica, 8  
**E-46004 VALENCIA**  
Tel: 0034/61351 59 44  
CH,P

## SWEDEN

Hewlett-Packard Sverige AB  
Sunnanvagen 14K  
**S-22226 LUND**  
Tel: (046) 13-69-79  
Telex: (854) 17886 (via Spånga office)  
CH

Hewlett-Packard Sverige AB  
Östra Tullgatan 3  
**S-21128 MALMÖ**  
Tel: (040) 70270  
Telex: (854) 17886 (via Spånga office)  
CH

Hewlett-Packard Sverige AB  
Västtra Vintergatan 9  
**S-70344 ÖREBRO**  
Tel: (19) 10-48-80  
Telex: (854) 17886 (via Spånga office)  
CH

Hewlett-Packard Sverige AB  
Skalholmsgatan 9, Kista  
Box 19  
**S-16393 SPÅNGA**  
Tel: (08) 750-2000  
Telex: (854) 17886  
Telefax: (08) 7527781  
A,CH,CM,CS,E,M,P

Hewlett-Packard Sverige AB  
Frötallsgatan 30  
**S-42132 VÄSTRA-FRÖLUNDA**  
Tel: (031) 49-09-50  
Telex: (854) 17886 (via Spånga office)  
CH,E,P

## SWITZERLAND

Hewlett-Packard (Schweiz) AG  
Clarastrasse 12  
**CH-4058 BASEL**  
Tel: (61) 33-59-20  
A

Hewlett-Packard (Schweiz) AG  
7, rue du Bois-du-Lan  
Case Postale 365  
**CH-1217 MEYRIN 2**  
Tel: (0041) 22-83-11-11  
Telex: 27333 HPAG CH  
CH,CM,CS

Hewlett-Packard (Schweiz) AG  
Allmend 2  
**CH-8967 WIDEN**  
Tel: (0041) 57 31 21 11  
Telex: 53933 hpag ch  
Cable: HPAG CH  
A,CH,CM,CS,E,M,P

## SYRIA

General Electronic Inc.  
Nuri Basha Ahnaf Ebn Kays Street  
**P.O. Box 5781 DAMASCUS**  
Tel: 33-24-87  
Telex: 411 215  
Cable: ELECTROBOR DAMASCUS E

Middle East Electronics  
**P.O. Box 2308 Abu Rummaneh DAMASCUS**  
Tel: 33 45 92  
Telex: 411 304 M

## TAIWAN

Hewlett-Packard Taiwan  
Kaohsiung Office  
11/F 456, Chung Hsiao 1st Road  
**KAOHSIUNG**  
Tel: (07) 2412318  
CH,CS,E

Hewlett-Packard Taiwan  
8th Floor Hewlett-Packard Building  
337 Fu Hsing North Road  
**TAIPEI**

Tel: (02) 712-0404  
Telex: 24439 HEWPACK  
Cable: HEWPACK Taipei  
A,CH,CM,CS,E,M,P  
Ing Lih Trading Co.  
3rd Floor, 7 Jen-Ai Road, Sec. 2  
**TAIPEI 100**  
Tel: (02) 3948191  
Cable: INGLIH TAIPEI A

## THAILAND

Unimesa  
30 Patpong Ave., Suriwong  
**BANGKOK 5**  
Tel: 235-5727  
Telex: 84439 Simonco TH  
Cable: UNIMESA Bangkok  
A,CH,CS,E,M  
Bangkok Business Equipment Ltd.  
5/5-6 Dejo Road  
**BANGKOK**  
Tel: 234-8670, 234-8671  
Telex: 87669-BEQUIPT TH  
Cable: BUSIQUIPT Bangkok P

## TOGO

Societe Africaine De  
Promotion  
**B.P. 12271 LOME**  
Tel: 21-62-88  
Telex: 5304 P

## TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.  
Corner McAllister Street &  
Eastern Main Road, Laventille  
**P.O. Box 732 PORT-OF-SPAIN**  
Tel: 624-4213  
Telex: 22561 CARTEL WG  
Cable: CARTEL, PORT OF SPAIN  
CM,E,M,P

Computer and Controls Ltd.  
**P.O. Box 51**  
66 Independence Square  
**PORT-OF-SPAIN**  
Tel: 623-4472  
Telex: 3000 POSTLX WG P

## TUNISIA

Tunisie Electronique  
31 Avenue de la Liberte  
**TUNIS**  
Tel: 280-144  
CH,CS,E,P

Corema  
1 ter. Av. de Carthage  
**TUNIS**  
Tel: 253-821  
Telex: 12319 CABAM TN M

## TURKEY

E.M.A  
Mediha Eldem Sokak No. 41/6  
Yenisehir  
**ANKARA**  
Tel: 319175  
Telex: 42321 KTX TR  
Cable: EMATRADE ANKARA M  
Kurt & Kurt A.S.  
Mithatpasa Caddesi No. 75  
Kat 4 Kizilay  
**ANKARA**  
Tel: 318875/6/7/8  
Telex: 42490 MESR TR A

Saniva Bilgisayar Sistemleri A.S.  
Buyukdere Caddesi 103/6  
Gayrettepe  
**ISTANBUL**  
Tel: 1673180  
Telex: 26345 SANI TR C,P

Teknim Company Ltd.  
Iran Caddesi No. 7  
Kavaklidere  
**ANKARA**  
Tel: 275800  
Telex: 42155 TKNM TR E,CM

## UNITED ARAB EMIRATES

Emitac Ltd.  
**P.O. Box 1641 SHARJAH,**  
Tel: 591181  
Telex: 68136 EMITAC EM  
Cable: EMITAC SHARJAH E,C,M,P,A  
Emitac Ltd.  
**P.O. Box 2711 ABU DHABI,**  
Tel: 820419-20  
Cable: EMITACH ABUDHABI  
Emitac Ltd.  
**P.O. Box 8391 DUBAI,**  
Tel: 377951  
Emitac Ltd.  
**P.O. Box 473 RAS AL KHAIMAH,**  
Tel: 28133, 21270

## UNITED KINGDOM

**GREAT BRITAIN**  
Hewlett-Packard Ltd.  
Trafalgar House  
Navigation Road  
**ALTRINCHAM**  
Cheshire WA14 1NU  
Tel: 061 928 6422  
Telex: 668068  
A,CH,CS,E,M,M,P  
Hewlett-Packard Ltd.  
Miller House  
The Ring, **BRACKNELL**  
Berks RG12 1XN  
Tel: 44344 424898  
Telex: 848733 E

Hewlett-Packard Ltd.  
Elstree House, Elstree Way  
**BOREHAMWOOD**, Herts WD6 1SG  
Tel: 01 207 5000  
Telex: 8952716  
E,CH,CS,P  
Hewlett-Packard Ltd.  
Oakfield House, Oakfield Grove  
Clifton **BRISTOL**, Avon BS8 2BN  
Tel: 0272 736806  
Telex: 444302  
CH,CS,E,P



# SALES & SUPPORT OFFICES

Arranged alphabetically by country

## GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.

Bridewell House  
Bridewell Place  
LONDON EC4V 6BS  
Tel: 01 583 6565

Telex: 298 163  
CH,CS,P

Hewlett-Packard Ltd.

Fourier House  
257-263 High Street  
LONDON COLNEY  
Herts. AL2 1HA, St. Albans  
Tel: 0727 24400  
Telex: 1-8952716  
CH,CS

Hewlett-Packard Ltd.

Pontefract Road  
NORMANTON, West Yorkshire WF6 1RN  
Tel: 0924 895566  
Telex: 557355  
CH,CS,P

Hewlett-Packard Ltd.

The Quadrangle  
106-118 Station Road  
REDHILL, Surrey RH1 1PS  
Tel: 0737 68655  
Telex: 947234  
CH,CS,E,P

Hewlett-Packard Ltd.

Avon House  
435 Stratford Road  
Shirley, SOLIHULL, West Midlands  
B90 4BL  
Tel: 021 745 8800  
Telex: 339 105  
CH,CS,E,P

Hewlett-Packard Ltd.

West End House  
41 High Street, West End  
SOUTHAMPTON  
Hampshire SO3 3DQ  
Tel: 04218 6767  
Telex: 477138  
CH,CS,P

Hewlett-Packard Ltd.

King Street Lane  
Winnersh, WOKINGHAM  
Berkshire RG11 5AR  
Tel: 0734 784774  
Telex: 847178  
A,CH,CS,E,M,P

Hewlett-Packard Ltd.

Nine Mile Ride  
Easthampstead, WOKINGHAM  
Berkshire, RG11 3LL  
Tel: 0344 773100  
Telex: 848805  
CH,CS,E,P

## IRELAND

### NORTHERN IRELAND

Hewlett-Packard Ltd.  
Cardiac Services Building  
95A Finaghy Road South  
BELFAST BT10 OBY  
Tel: 0232 625-566  
Telex: 747626  
CH,CS

## SCOTLAND

Hewlett-Packard Ltd.

SOUTH QUEENSFERRY  
West Lothian, EH30 9TG  
Tel: 031 331 1188  
Telex: 72682  
CH,CM,CS,E,M,P

## UNITED STATES

### Alabama

Hewlett-Packard Co.  
700 Century Park South, Suite 128  
BIRMINGHAM, AL 35226  
Tel: (205) 822-6802  
C,CH,CS,P\*  
Hewlett-Packard Co.  
420 Wynn Drive  
P.O. Box 7700  
HUNTSVILLE, AL 35807  
Tel: (205) 830-2000  
C,CH,CM,CS,E,M\*

### Alaska

Hewlett-Packard Co.  
3601 C St., Suite 1234  
ANCHORAGE, AK 99503  
Tel: (907) 563-8855  
CH,CS,E

### Arizona

Hewlett-Packard Co.  
8080 Pointe Parkway West  
PHOENIX, AZ 85044  
Tel: (602) 273-8000  
A,CH,CM,CS,E,M  
Hewlett-Packard Co.  
2424 East Aragon Road  
TUCSON, AZ 85706  
Tel: (602) 573-7400  
CH,E,M\*\*

### California

Hewlett-Packard Co.  
99 South Hill Dr.  
BRISBANE, CA 94005  
Tel: (415) 330-2500  
CH,CS  
Hewlett-Packard Co.  
P.O. Box 7830 (93747)  
5060 E. Clinton Avenue, Suite 102  
FRESNO, CA 93727  
Tel: (209) 252-9652  
CH,CS,M  
Hewlett-Packard Co.  
1421 S. Manhattan Av.  
FULLERTON, CA 92631  
Tel: (714) 999-6700  
CH,CM,CS,E,M  
Hewlett-Packard Co.  
320 S. Kellogg, Suite B  
GOLETA, CA 93117  
Tel: (805) 967-3405  
CH

Hewlett-Packard Co.  
5400 W. Rosecrans Blvd.  
LAWDALE, CA 90260  
P.O. Box 92105  
LOS ANGELES, CA 90009  
Tel: (213) 643-7500  
Telex: 910-325-6608  
CH,CM,CS,M

Hewlett-Packard Co.  
3155 Porter Drive  
PALO ALTO, CA 94304  
Tel: (415) 857-8000  
CH,CS,E

Hewlett-Packard Co.  
4244 So. Market Court, Suite A  
P.O. Box 15976  
SACRAMENTO, CA 95813  
Tel: (916) 929-7222  
A\*,CH,CS,E,M

Hewlett-Packard Co.  
9606 Aero Drive  
P.O. Box 23333  
SAN DIEGO, CA 92123  
Tel: (619) 279-3200  
CH,CM,CS,E,M

Hewlett-Packard Co.  
2305 Camino Ramon 'C'  
SAN RAMON, CA 94583  
Tel: (415) 838-5900  
CH,CS

Hewlett-Packard Co.  
3005 Scott Boulevard  
SANTA CLARA, CA 95050  
Tel: (408) 988-7000  
Telex: 910-338-0586  
A,CH,CM,CS,E,M

Hewlett-Packard Co.  
5703 Corsa Avenue  
WESTLAKE VILLAGE, CA 91362  
Tel: (213) 706-6800  
E\*,CH\*,CS\*

### Colorado

Hewlett-Packard Co.  
24 Inverness Place, East  
ENGLEWOOD, CO 80112  
Tel: (303) 649-5000  
A,CH,CM,CS,E,M

### Connecticut

*Eff. Dec. 1, 1984*  
Hewlett-Packard Co.  
500 Sylvan Av.  
BRIDGEPORT, CT 06606  
Tel: (203) 371-6454  
CH,CS,E  
Hewlett-Packard Co.  
47 Barnes Industrial Road South  
P.O. Box 5007  
WALLINGFORD, CT 06492  
Tel: (203) 265-7801  
A,CH,CM,CS,E,M

### Florida

Hewlett-Packard Co.  
2901 N.W. 62nd Street  
P.O. Box 24210  
FORT LAUDERDALE, FL 33307  
Tel: (305) 973-2600  
CH,CS,E,M,P\*  
Hewlett-Packard Co.  
4080 Woodcock Drive, Suite 132  
JACKSONVILLE, FL 32207  
Tel: (904) 398-0663  
C\*,CH\*,M\*\*

Hewlett-Packard Co.  
6177 Lake Ellenor Drive  
P.O. Box 13910  
ORLANDO, FL 32859  
Tel: (305) 859-2900  
A,C,CH,CM,CS,E,P\*  
Hewlett-Packard Co.  
4700 Bayoue Blvd.  
Building 5  
PENSACOLA, FL 32505  
Tel: (904) 476-8422  
A,C,CH,CM,CS,M  
Hewlett-Packard Co.  
5550 Idlewild, #150  
P.O. Box 15200  
TAMPA, FL 33684  
Tel: (813) 884-3282  
A\*,C,CH,CS,E\*,M\*,P\*

### Georgia

Hewlett-Packard Co.  
2000 South Park Place  
P.O. Box 105005  
ATLANTA, GA 30348  
Tel: (404) 955-1500  
Telex: 810-766-4890  
A,C,CH,CM,CS,E,M,P\*

### Hawaii

Hewlett-Packard Co.  
Kawaiahao Plaza, Suite 190  
567 South King Street  
HONOLULU, HI 96813  
Tel: (808) 526-1555  
A,CH,E,M

### Illinois

Hewlett-Packard Co.  
304 Eldorado Road  
P.O. Box 1607  
BLOOMINGTON, IL 61701  
Tel: (309) 662-9411  
CH,M\*\*  
Hewlett-Packard Co.  
525 W. Monroe, #1300  
CHICAGO, IL 60606  
Tel: (312) 930-0010  
CH,CS

Hewlett-Packard Co.

1200 Diehl  
NAPERVILLE, IL 60566  
Tel: (312) 357-8800  
CH\*,CS

Hewlett-Packard Co.

5201 Tollview Drive  
ROLLING MEADOWS, IL 60008  
Tel: (312) 255-9800  
Telex: 910-687-1066  
A,CH,CM,CS,E,M

### Indiana

Hewlett-Packard Co.  
11911 N. Meridian St.  
CARMEL, IN 46032  
Tel: (317) 844-4100  
A,CH,CM,CS,E,M

### Iowa

Hewlett-Packard Co.  
4070 22nd Av. SW  
CEDAR RAPIDS, IA 52404  
Tel: (319) 390-4250  
CH,CS,E,M



## UNITED STATES (Cont'd)

Hewlett-Packard Co.  
4201 Corporate Dr.  
**WEST DES MOINES, IA 50265**  
Tel: (515) 224-1435  
A\*\*,CH,M\*\*

### Kentucky

Hewlett-Packard Co.  
10300 Linn Station Road, #100  
**LOUISVILLE, KY 40223**  
Tel: (502) 426-0100  
A,CH,CS,M

### Louisiana

Hewlett-Packard Co.  
160 James Drive East  
**ST. ROSE, LA 70087**  
P.O. Box 1449  
**KENNER, LA 70063**  
Tel: (504) 467-4100  
A,C,CH,E,M,P\*

### Maryland

Hewlett-Packard Co.  
3701 Koppers Street  
**BALTIMORE, MD 21227**  
Tel: (301) 644-5800  
Telex: 7 10-862-1943  
A,CH,CM,CS,E,M  
Hewlett-Packard Co.  
2 Choke Cherry Road  
**ROCKVILLE, MD 20850**  
Tel: (301) 948-6370  
A,CH,CM,CS,E,M

### Massachusetts

Hewlett-Packard Co.  
1775 Minuteman Road  
**ANDOVER, MA 01810**  
Tel: (617) 682-1500  
A,C,CH,CS,CM,E,M,P\*  
Hewlett-Packard Co.  
32 Hartwell Avenue  
**LEXINGTON, MA 02173**  
Tel: (617) 861-8960  
CH,CS,E

### Michigan

Hewlett-Packard Co.  
4326 Cascade Road S.E.  
**GRAND RAPIDS, MI 49506**  
Tel: (616) 957-1970  
CH,CS,M  
Hewlett-Packard Co.  
39550 Orchard Hill Place Drive  
**NOVI, MI 48050**  
Tel: (313) 349-9200  
A,CH,CS,E,M  
Hewlett-Packard Co.  
1771 W. Big Beaver Road  
**TROY, MI 48084**  
Tel: (313) 643-6474  
CH,CS

### Minnesota

Hewlett-Packard Co.  
2025 W. Larpenteur Ave.  
**ST. PAUL, MN 55113**  
Tel: (612) 644-1100  
A,CH,CM,CS,E,M

### Missouri

Hewlett-Packard Co.  
1001 E. 101st Terrace  
**KANSAS CITY, MO 64131**  
Tel: (816) 941-0411  
A,CH,CM,CS,E,M  
Hewlett-Packard Co.  
13001 Hollenberg Drive  
**BRIDGETON, MO 63044**  
Tel: (314) 344-5100  
A,CH,CS,E,M

### Nebraska

Hewlett-Packard  
10824 Old Mill Rd., Suite 3  
**OMAHA, NE 68154**  
Tel: (402) 334-1813  
CM,M

### New Jersey

Hewlett-Packard Co.  
120 W. Century Road  
**PARAMUS, NJ 07652**  
Tel: (201) 265-5000  
A,CH,CM,CS,E,M  
Hewlett-Packard Co.  
20 New England Av. West  
**PISCATAWAY, NJ 08854**  
Tel: (201) 981-1199  
A,CH,CM,CS,E

### New Mexico

Hewlett-Packard Co.  
11300 Lomas Blvd., N.E.  
P.O. Box 11634  
**ALBUQUERQUE, NM 87112**  
Tel: (505) 292-1330  
CH,CS,E,M

### New York

Hewlett-Packard Co.  
5 Computer Drive South  
**ALBANY, NY 12205**  
Tel: (518) 458-1550  
A,CH,E,M  
Hewlett-Packard Co.  
9600 Main Street  
P.O. Box AC  
**CLARENCE, NY 14031**  
Tel: (716) 759-8621  
CH,CS,E  
Hewlett-Packard Co.  
200 Cross Keys Office Park  
**FAIRPORT, NY 14450**  
Tel: (716) 223-9950  
A,CH,CM,CS,E,M  
Hewlett-Packard Co.  
7641 Henry Clay Blvd.  
**LIVERPOOL, NY 13088**  
Tel: (315) 451-1820  
A,CH,CM,CS,E,M  
Hewlett-Packard Co.  
No. 1 Pennsylvania Plaza  
55th Floor  
34th Street & 8th Avenue  
**MANHATTAN NY 10119**  
Tel: (212) 971-0800  
CH,CS,M\*  
Hewlett-Packard Co.  
15 Myers Corner Rd.  
**WAPPINGER FALLS, NY 12590**  
CM,E

Hewlett-Packard Co.  
250 Westchester Avenue  
**WHITE PLAINS, NY 10604**  
Tel: (914) 684-6100  
CM,CH,CS,E  
Hewlett-Packard Co.  
3 Crossways Park West  
**WOODBURY, NY 11797**  
Tel: (516) 921-0300  
A,CH,CM,CS,E,M

### North Carolina

Hewlett-Packard Co.  
305 Gregson Dr.  
**CARY, NC 27511**  
Tel: (919) 467-6600  
C,CH,CM,CS,E,M,P\*  
Hewlett-Packard Co.  
9600-H Southern Pine Blvd.  
**CHARLOTTE, NC 28210**  
Tel: (704) 527-8780  
CH\*,CS\*  
Hewlett-Packard Co.  
5605 Roanne Way  
P.O. Box 26500  
**GREENSBORO, NC 27420**  
Tel: (919) 852-1800  
A,C,CH,CM,CS,E,M,P\*

### Ohio

Hewlett-Packard Co.  
9920 Carver Road  
**CINCINNATI, OH 45242**  
Tel: (513) 891-9870  
CH,CS,M  
Hewlett-Packard Co.  
16500 Sprague Road  
**CLEVELAND, OH 44130**  
Tel: (216) 243-7300  
A,CH,CM,CS,E,M  
Hewlett-Packard Co.  
980 Springboro Pike  
**MIAMISBURG, OH 45343**  
Tel: (513) 859-8202  
A,CH,CM,E\*,M  
Hewlett-Packard Co.  
675 Brooksedge Blvd.  
**WESTERVILLE, OH 43081**  
Tel: (614) 436-1041  
CH,CM,CS,E\*

### Oklahoma

Hewlett-Packard Co.  
304 N. Meridian, Suite A  
P.O. Box 75609  
**OKLAHOMA CITY, OK 73147**  
Tel: (405) 946-9499  
C,CH,CS,E\*,M  
Hewlett-Packard Co.  
3840 S. 103rd E. Ave., #100  
P.O. Box 35747  
**TULSA, OK 74153**  
Tel: (918) 665-3300  
A\*\*,C,CH,CS,M\*,E,P\*

### Oregon

Hewlett-Packard Co.  
9255 S. W. Pioneer Court  
P.O. Box 328  
**WILSONVILLE, OR 97070**  
Tel: (503) 682-8000  
A,CH,CS,E\*,M

### Pennsylvania

Hewlett-Packard Co.  
50 Dorchester Rd.  
P.O. Box 6080  
**HARRISBURG, PA 17111**  
Tel: (717) 657-5900  
C  
Hewlett-Packard Co.  
111 Zeta Drive  
**PITTSBURGH, PA 15238**  
Tel: (412) 782-0400  
A,CH,CS,E,M  
Hewlett-Packard Co.  
2750 Monroe Boulevard  
P.O. Box 713  
**VALLEY FORGE, PA 19482**  
Tel: (215) 666-9000  
A,CH,CM,CS,E,M

### South Carolina

Hewlett-Packard Co.  
Brookside Park, Suite 122  
1 Harbison Way  
P.O. Box 21708  
**COLUMBIA, SC 29221**  
Tel: (803) 732-0400  
A,C,CH,CS,M  
Hewlett-Packard Co.  
100 Executive Cntr. Dr.  
Koger Executive Center  
Chesterfield Bldg., Suite 124  
**GREENVILLE, SC 29615**  
Tel: (803) 297-4120  
C

### Tennessee

Hewlett-Packard Co.  
One Energy Cntr. #200  
Pellissippi Pkwy.  
P.O. Box 22490  
**KNOXVILLE, TN 37933**  
Tel: (615) 966-4747  
A,C,CH,CS,M  
Hewlett-Packard Co.  
3070 Directors Row  
**MEMPHIS, TN 38131**  
Tel: (901) 346-8370  
A,C,M  
Hewlett-Packard Co.  
220 Great Circle Road, Suite 116  
**NASHVILLE, TN 37228**  
Tel: (615) 255-1271  
C,M,P\*

### Texas

Hewlett-Packard Co.  
11002-B Metric Boulevard  
**AUSTIN, TX 78758**  
Tel: (512) 835-6771  
C,CM,E,P\*  
Hewlett-Packard Co.  
5700 Cromo Dr  
P.O. Box 12903  
**EL PASO, TX 79913**  
Tel: (915) 833-4400  
CH,E\*,M\*\*



# SALES & SUPPORT OFFICES

Arranged alphabetically by country

## UNITED STATES (Cont'd)

Hewlett-Packard Co.  
3952 Sand Shell St  
**FORT WORTH, TX 76137**  
Tel: (817) 232-9500  
A,C,CH,E,M

Hewlett-Packard Co.  
10535 Harwin Drive  
P.O. Box 42816  
**HOUSTON, TX 77042**  
Tel: (713) 776-6400  
A,C,CH,CS,E,M,P\*

Hewlett-Packard Co.  
511 W. John W. Carpenter Fwy.  
Royal Tech. Center #100  
**IRVINE, TX 75062**  
Tel: (214) 556-1950  
C,CH,CS,E

Hewlett-Packard Co.  
930 E. Campbell Rd.  
P.O. Box 83/1270  
**RICHARDSON, TX 75083-1270**  
Tel: (214) 231-6101  
A,CH,CM,CS,E,M,P\*

Hewlett-Packard Co.  
1020 Central Parkway South  
P.O. Box 32993  
**SAN ANTONIO, TX 78232**  
Tel: (512) 494-9336  
A,C,CH,CS,E,M,P\*

### Utah

Hewlett-Packard Co.  
3530 W. 2100 South  
P.O. Box 26626  
**SALT LAKE CITY, UT 84126**  
Tel: (801) 974-1700  
A,CH,CS,E,M

### Virginia

Hewlett-Packard Co.  
4305 Cox Road  
**GLEN ALLEN, VA 23060**  
P.O. Box 9669  
**RICHMOND, VA 23228**  
Tel: (804) 747-7750  
A,C,CH,CS,E,M,P\*

### Washington

Hewlett-Packard Co.  
15815 S.E. 37th Street  
**BELLEVUE, WA 98006**  
Tel: (206) 643-4000  
A,CH,CM,CS,E,M

Hewlett-Packard Co.  
708 North Argonne Road  
P.O. Box 3808  
**SPOKANE, WA 99220-3808**  
Tel: (509) 922-7000  
CH,CS

### West Virginia

Hewlett-Packard Co.  
4604 MacCorkle Ave.  
**CHARLESTON, WV 25304**  
Tel: (304) 925-0492  
A,M

### Wisconsin

Hewlett-Packard Co.  
275 N. Corporate Dr.  
**BROOKFIELD, WI 53005**  
Tel: (414) 784-8800  
A,CH,CS,E\*,M

### URUGUAY

*Pablo Ferrando S.A.C. e I.*  
*Avenida Italia 2877*  
*Casilla de Correo 370*  
**MONTEVIDEO**  
Tel: 80-2586  
Telex: Public Booth 901  
A,CM,E,M

*Mini Computadores, Ltda.*  
*Avda. del Libertador Brig*  
*Gral Lavalleja 2071*  
*Local 007*

### MONTEVIDEO

Telex: 29-55-22  
Telex: 901 P BOOTH UY  
P

*Olympia de Uruguay S.A.*  
*Maquinas de Oficina*  
*Avda. del Libertador 1997*  
*Casilla de Correos 6644*

### MONTEVIDEO

Telex: 91-1809, 98.-3807  
Telex: 6342 OROU UY  
P

## VENEZUELA

Hewlett-Packard de Venezuela C.A.  
3RA Transversal Los Ruices Norte  
Edificio Segre 1, 2 & 3  
**CARACAS 1071**

Apartado 50933  
Tel: 239-4133  
Telex: 251046 HEWPACK  
A,CH,CS,E,M,P

Hewlett-Packard de Venezuela C.A.  
Residencias Tia Betty Local 1  
Avenida 3 y con calle 75  
**MARACAIBO, Estado Zulia**  
Apartado 2646

Tel: (061) 75801-75805-75806-80304  
Telex: 62464 HPMAR  
C,E\*

Hewlett-Packard de Venezuela C.A.  
Urb. Lomas de Este  
Torre Trebol — Piso 11  
**VALENCIA, Estado Carabobo**  
Apartado 3347

Tel: (041) 222992/223024  
CH,CS,P

*Albis Venezolana S.R.L.*  
*Av. Las Marias, Ota. Alix,*  
*El Pedregal*  
*Apartado 81025*

### CARACAS 1080A

Tel: 747984, 742146  
Telex: 24009 ALBIS VC  
A

*Tecnologica Medica del Caribe, C.A.*  
*Multicentro Empresarial del Este*  
*Ave. Libertador*  
*Edif. Libertador*  
*Nucleo "C" - Oficina 51-52*

### CARACAS

Telex: 339867/333780  
M

## CIZUCA

*Cientifica Zulia C.A.*  
*Calle 70, Los Olivos*  
*No. 66-86*  
*Apartado 1843*  
**MARACAIBO**  
Tel: 54-64-37, 54-63-85, 54-64-94  
Telex: 62144  
A

## YUGOSLAVIA

*Do Hermes*  
*General Zdanova 4*  
*Telex: YU-11000 BEOGRAD*  
A,CH,E,P

### Hermes

*Titova 50*  
*Telex: YU-61000 LJUBLJANA*  
CH,CS,E,M,P

### Elektrotehna

*Titova 51*  
*Telex: YU-61000 LJUBLJANA*  
CM

## ZAMBIA

R.J. Tilbury (Zambia) Ltd.  
P.O. Box 32792  
**LUSAKA**  
Tel: 215590  
Telex: 40128  
E

## ZIMBABWE

*Field Technical Sales*  
*45 Kelvin Road, North*  
*P.B. 3458*  
**SALISBURY**  
Tel: 705 231  
Telex: 4-122 RH  
E,P

August 1984

*HP distributors are printed in italics.*



